

# YAMAHA

# CDC-765/665/565

*Natural Sound Compact Disc Player*

*Lecteur de disque audionumérique de la série "Natural Sound"*

*Thank you for selecting this YAMAHA Compact Disc Player.  
Nous vous remercions d'avoir porté votre choix sur ce lecteur de disque  
audionumérique YAMAHA.*



## OWNER'S MANUAL

## MODE D'EMPLOI



### CONTENTS

|  |    |
|--|----|
| Safety Instructions.....   | 2  |
| Features .....   | 4  |
| Connections .....  | 5  |
| Identification of Components .....   | 6  |
| Basic Operation .....  | 8  |
| Random-Sequence Play .....   | 13 |
| Program Play .....   | 14 |
| Repeat Play.....   | 18 |
| Index Search .....   | 18 |
| CD Synchronized Recording.....   | 19 |
| Track Programming for Recording to Tape<br><b>for CDC-765 and CDC-665 only</b> ..... | 20 |
| Notes about the Remote Control   |    |
| Transmitter .....  | 24 |
| Notes about Handling Compact Discs .....   | 24 |
| Troubleshooting.....   | 25 |
| Specifications.....  | 25 |


### TABLE DES MATIERES

|  |    |
|--|----|
| Caractéristiques .....   | 26 |
| Attention .....  | 27 |
| Connexions .....   | 28 |
| Identification des composants .....  | 29 |
| Fonctionnement de base .....   | 31 |
| Lecture en séquence aléatoire .....  | 36 |
| Lecture programmée .....   | 37 |
| Lecture répétée .....  | 41 |
| Recherche d'index .....  | 41 |
| Enregistrement synchronisé d'un<br>disque audionumérique .....   | 42 |
| Programmation des plages pour<br>enregistrement sur bande<br><b>CDC-765 et CDC-665 seulement</b> ..... | 43 |
| Remarques concernant la télécommande .....   | 47 |
| Remarques concernant la manipulation des disques ....  | 47 |
| Dépistage de pannes .....  | 48 |
| Caractéristiques techniques .....  | 48 |

# SAFETY INSTRUCTIONS
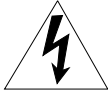
|  |   |   |
|--|---|---|
|   | <b>CAUTION</b><br>RISK OF ELECTRIC SHOCK<br>DO NOT OPEN |  |
| <b>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</b> |   |   |

 • Explanation of Graphical Symbols



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert you to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert you to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

|  |
|--|
| <b>WARNING</b><br>TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE. |
|--|

- 1** Read Instructions – All the safety and operating instructions should be read before the unit is operated.
- 2** Retain Instructions – The safety and operating instructions should be retained for future reference.
- 3** Heed Warnings – All warnings on the unit and in the operating instructions should be adhered to.
- 4** Follow Instructions – All operating and other instructions should be followed.
- 5** Water and Moisture – The unit should not be used near water – for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, etc.
- 6** Carts and Stands – The unit should be used only with a cart or stand that is recommended by the manufacturer.
- 6A** A unit and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the unit and cart combination to overturn.
- 7** Wall or Ceiling Mounting – The unit should be mounted to a wall or ceiling only as recommended by the manufacturer.
- 8** Ventilation – The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, the unit should not be situated on a bed, sofa, rug, or similar surface, that may block the ventilation openings; or placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.



- 9** Heat – The unit should be situated away from heat sources such as radiators, stoves, or other appliances that produce heat.
- 10** Power Sources – The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the unit.
- 11** Power-Cord Protection – Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the unit.
- 12** Cleaning – The unit should be cleaned only as recommended by the manufacturer.
- 13** Nonuse Periods – The power cord of the unit should be unplugged from the outlet when left unused for a long period of time.
- 14** Object and Liquid Entry – Care should be taken so that objects do not fall into and liquids are not spilled into the inside of the unit.
- 15** Damage Requiring Service – The unit should be serviced by qualified service personnel when:
  - A.** The power-supply cord or the plug has been damaged; or
  - B.** Objects have fallen, or liquid has been spilled into the unit; or
  - C.** The unit has been exposed to rain; or
  - D.** The unit does not appear to operate normally or exhibits a marked change in performance; or
  - E.** The unit has been dropped, or the cabinet damaged.
- 16** Servicing – The user should not attempt to service the unit beyond those means described in the operating instructions. All other servicing should be referred to qualified service personnel.
- 17** Power Lines – An outdoor antenna should be located away from power lines.
- 18** Grounding or Polarization – Precautions should be taken so that the grounding or polarization is not defeated.

**IMPORTANT!**

Please record the serial number of this unit in the space below.

Model:  
Serial No.:

The serial number is located on the rear of the unit. Retain this Owner's Manual in a safe place for future reference

**CAUTION: READ THIS BEFORE OPERATING YOUR UNIT**

- 1 To ensure the finest performance, please read this manual carefully. Keep it in a safe place for future reference.
- 2 Install your unit in a cool, dry, clean place – away from windows, heat sources, and too much vibration, dust, moisture or cold. Avoid sources of hum (transformers, motors). To prevent fire or electrical shock, do not expose to rain and water.
- 3 Do not operate the unit upside-down. It may overheat, possibly causing damage.
- 4 Never open the cabinet. If a foreign object drops into the set, contact your dealer.
- 5 Do not use force on switches, knobs or cords. When moving the set, first turn the unit off. Then gently disconnect the power plug and the cords connecting to other equipment. Never pull the cord itself.
- 6 Do not attempt to clean the unit with chemical solvents; this might damage the finish. Use a clean, dry cloth.
- 7 Be sure to read the "TROUBLESHOOTING" section on common operating errors before concluding that your unit is faulty.
- 8 Do not place another component on top of this unit, because to do so will discolor or damage the surface of the unit.
- 9 To prevent damage by lightning, disconnect the power cord from the household AC outlet during an electrical storm.
- 10 When disconnecting the power cord from the household AC outlet, grasp the plug; do not pull the cord.
- 11 When moving the unit, be sure to first disconnect the power cord from the household AC outlet, and disconnect cords connected to other equipment.

**CAUTION FOR CARRYING THIS UNIT**

Be sure not to carry or tip this unit with discs remaining in it.

**CAUTION FOR MOVING THIS UNIT**

When moving this unit, first remove all discs from the disc tray and close the tray by pressing the **OPEN/CLOSE** button. After you confirm that the display lights up as shown below, switch off the power by pressing the **POWER** switch, and then disconnect the power plug from the AC outlet.



Never switch off the power until the display lights up as above, otherwise this unit will break down during moving because the internal mechanism is not locked.

**WARNING****CAUTION**

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

**DANGER**

Invisible laser radiation when open and interlock failed or defeated.  
Avoid direct exposure to beam.

**Laser Diode Properties**

- Material: GaAlAs
- Wavelength: 780nm
- Emission Duration: continuous
- Laser Output: max. 44.6μW\*

\* This output is the value measured at a distance of about 200mm from the objective lens surface on the Optical Pick-up Block.

As the laser beam used in this compact disc player is harmful to the eyes, do not attempt to disassemble the cabinet. Refer servicing to qualified personnel only.

To avoid electrical shock, do not open the unit. Refer servicing to qualified personnel only.

**DANGER:** The use of optical instrument with this product will increase eye hazard.

The apparatus is not disconnected from the AC power source as long as it is connected to the wall outlet, even if the apparatus itself is turned off.

**We Want You Listening For A Lifetime (for US customers only)**

YAMAHA and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion – and, most importantly, without affecting your sensitive hearing. Since hearing damage from loud sounds is

often undetectable until it is too late, YAMAHA and the Electronic Industries Association's Consumer Electronics Group recommend you to avoid prolonged exposure from excessive volume levels.



## FCC INFORMATION (for US customers only)

### 1. IMPORTANT NOTICE : DO NOT MODIFY THIS UNIT!

This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modifications not expressly approved by Yamaha may void your authority, granted by the FCC, to use the product.

### 2. IMPORTANT : When connecting this product to accessories and/or another product use only high quality shielded cables. Cable/s supplied with this product MUST be used. Follow all installation instructions. Failure to follow instructions could void your FCC authorization to use this product in the USA.

### 3. NOTE : This product has been tested and found to comply with the requirements listed in FCC Regulations, Part 15 for Class "B" digital devices. Compliance with these requirements provides a reasonable level of assurance that your use of this product in a residential environment will not result in harmful interference with other electronic devices.

This equipment generates/uses radio frequencies and, if not installed and used according to the instructions found in the users manual, may cause interference harmful to the operation of other electronic devices.

Compliance with FCC regulations does not guarantee that interference will not occur in all installations. If this product is found to be the source of interference, which can be determined by turning the unit "OFF" and "ON", please try to eliminate the problem by using one of the following measures:

Relocate either this product or the device that is being affected by the interference.

Utilize power outlets that are on different branch (circuit breaker or fuse) circuits or install AC line filter/s.

In the case of radio or TV interference, relocate/reorient the antenna. If the antenna lead-in is 300 ohm ribbon lead, change the lead-in to coaxial type cable.

If these corrective measures do not produce satisfactory results, please contact the local retailer authorized to distribute this type of product. If you can not locate the appropriate retailer, please contact Yamaha Electronics Corp., U.S.A. 6660 Orangethorpe Ave, Buena Park, CA 90620.

The above statements apply ONLY to those products distributed by Yamaha Corporation of America or its subsidiaries.

### CAUTION (FOR CANADA MODEL)

TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT AND FULLY INSERT.

### FOR CANADIAN CUSTOMER

THIS CLASS B DIGITAL APPARATUS MEETS ALL REQUIREMENTS OF THE CANADIAN INTERFERENCE-CAUSING EQUIPMENT REGULATIONS.

 
## FEATURES

- 5-Disc Carousel Auto-changer
  - Full Opening Disc Tray for Changing 5 Discs at a Time
  - PLAYXCHANGE; Disc Changing Capability while Playing Another
  - Random Access Programmable Play
  - Random-Sequence Play
  - Single Track/Entire Disc/All Disc Repeat Play
  - Adjustable Display Brightness
  - Remote Control Capability
  - Disc Scanning Capability Useful for Disc Searching or Disc Checking
  - CD Synchronized Recording with a Compatible YAMAHA Tape Deck
- CDC-765 and CDC-665 only**
- Automatic Programming for Recording to Tape
  - Automatic Peak Level Searching Capability
  - Optical Digital Output
- CDC-765 only**
- Program Data Filing Capability

# CONNECTIONS

- Before making any connections, switch OFF the power to the unit and the amplifier or other component.
- Connections should be made to the correct input terminals of the amplifier or other component.

- If the placement of this unit causes noise to other equipment, such as a tuner, separate them from each other.

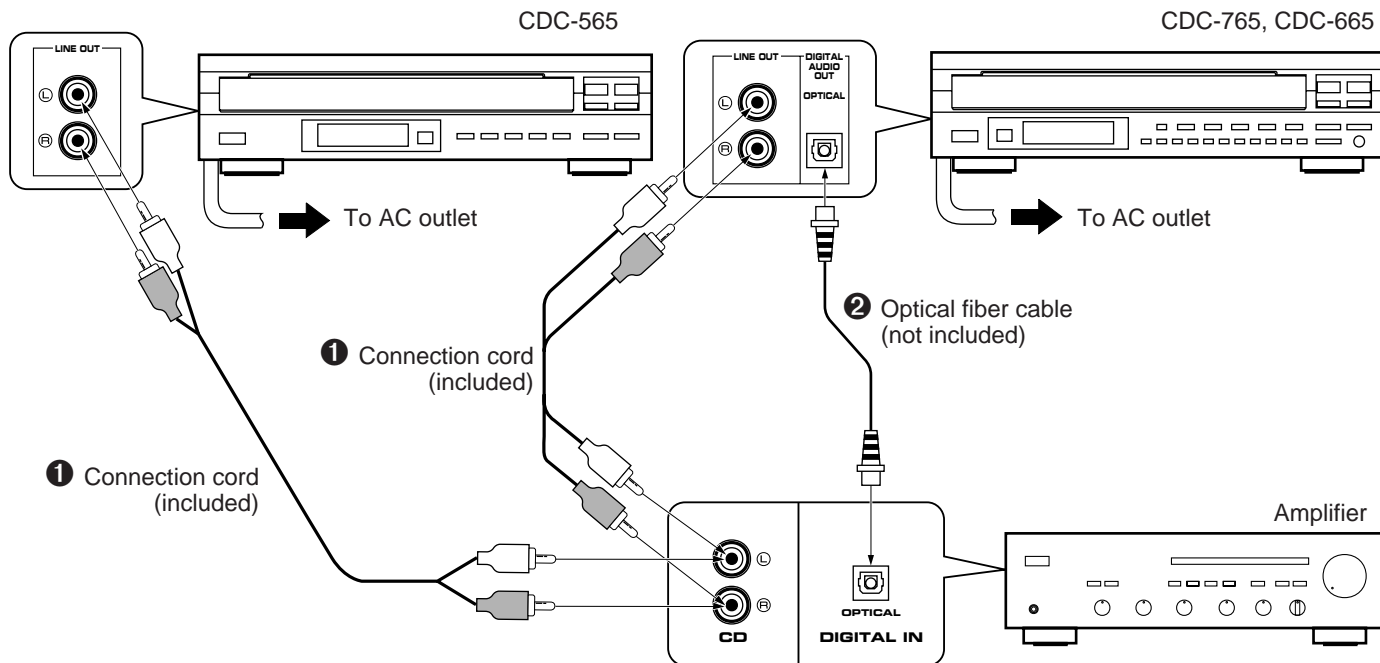

Choose one of the ways listed below to connect this unit to your amplifier.

## When the LINE OUT (analog) terminals of this unit are used ( ① )

- Be sure that the left ("L") and right ("R") LINE OUT terminals are connected to the corresponding (left and right) terminals of the amplifier or other component.
- Connect the "LINE OUT" terminals to the "CD" (or "AUX") terminals of the amplifier. If the amplifier does not have such terminals, use the "TAPE PB" terminals. For additional details concerning these connections, refer to the operation instructions for the amplifier being used.

### **CDC-765 and CDC-665 only**

Adjust the level of signals output into an amplifier, etc. by using the **OUTPUT LEVEL** button.

## **CDC-765 and CDC-665 only**

### When the DIGITAL AUDIO OUT (OPTICAL) terminal of this unit is used ( ② )

- Before using this terminal, remove the terminal's cover by pulling it.
- Make the connection from this terminal to the optical input terminal of an amplifier by using a commercially available optical fiber cable.
  - \* Use an optical fiber cable that conforms to EIAJ standards. Other cables might not function correctly.
- Be sure to attach the terminal's cover when this terminal is not being used, in order to protect the terminal from dust.
- Set the level of signals output into an amplifier to max. by using the **OUTPUT LEVEL** button.
- This terminal can also be connected to the optical input terminal of a digital audio tape deck (DAT) etc. to record CD onto tape directly.

## **For Custom Installer For U.S.A. and Canada models of CDC-765 only**

### REMOTE CONTROL (IN, OUT) terminals

These terminals are used for custom installation system. When this unit is connected to the components for custom installation system, you can operate this unit with the system remote control. Connect the **REMOTE CONTROL IN** terminal of this unit to the output terminal of the central controller for custom installation system.

By connecting the **REMOTE CONTROL OUT** terminal of this unit to the REMOTE CONTROL IN terminal of the other component, you can also operate it with the system remote control. In this way, up to 6 components can be connected in series.

# IDENTIFICATION OF COMPONENTS

\* ( ) indicates the page number on which the control and its function are best described.

## FRONT PANEL

 
\* The control functions on the main unit and on the remote control transmitter are virtually identical, with the exceptions below.

- \* The **▷/⏸** (PLAY/PAUSE) button on the main unit has both the functions of the **PLAY** button and the **PAUSE** button on the remote control transmitter.
- \* The **SKIP/SEARCH** buttons on the main unit have both the functions of the **SKIP** button and the **SEARCH** button on the remote control transmitter.

## CDC-765, CDC-665


**CDC-765 only**

**CDC-765 only**

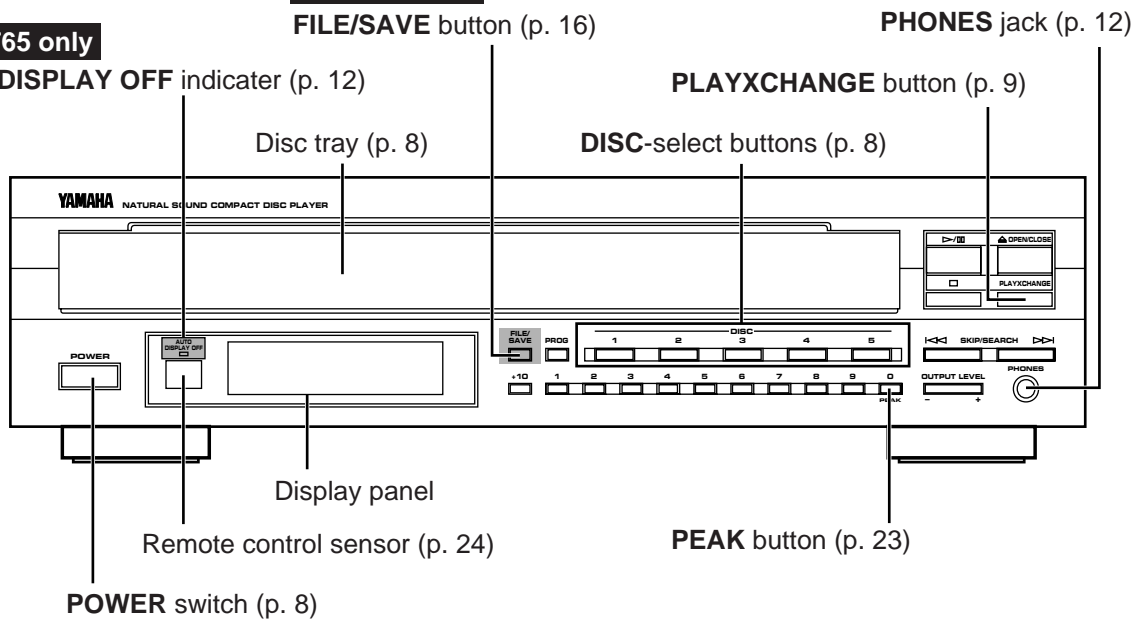


Parts in the shaded areas are provided for CDC-765 only.

## CDC-565

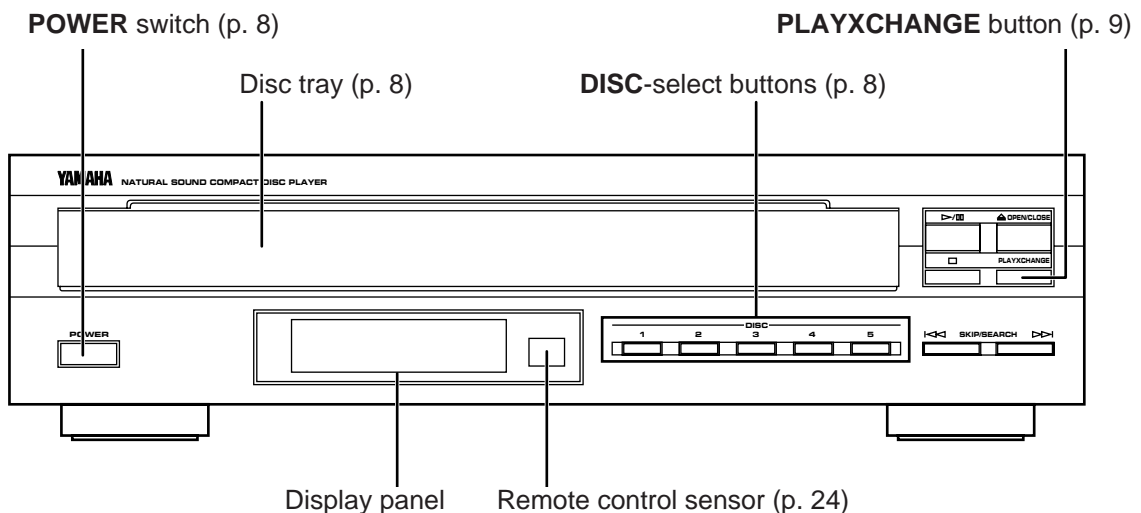 

\* ( ) indicates the page number on which the control button is best described.

## REMOTE CONTROL TRANSMITTER

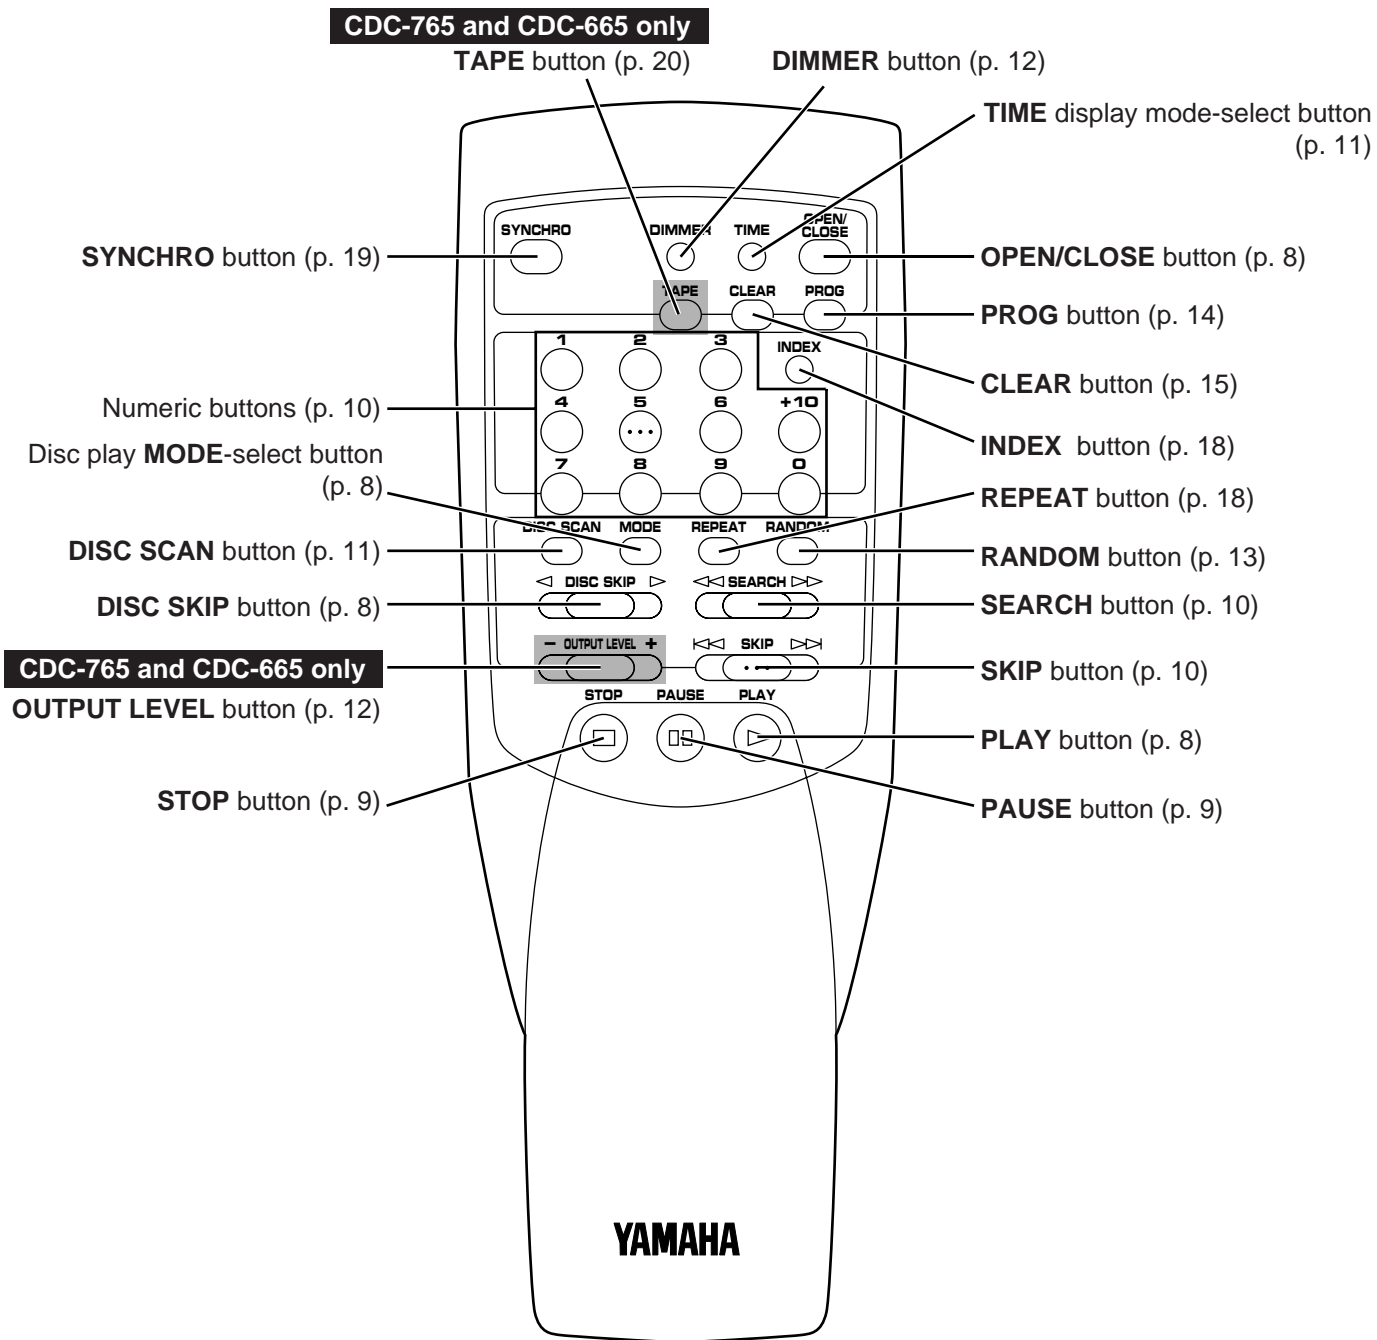 




Parts in the shaded areas are provided for CDC-765 and CDC-665 only.

This manual describes how to operate this unit by using the remote control transmitter. To operate this unit on the front panel, use the corresponding buttons on the front panel.


# BASIC OPERATION

   **CDC-765, CDC-665**


**CDC-565**

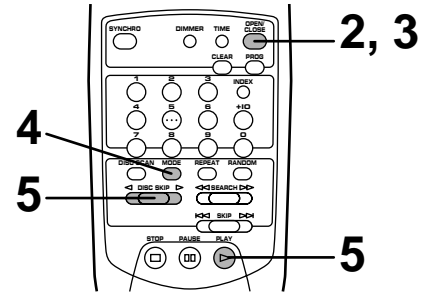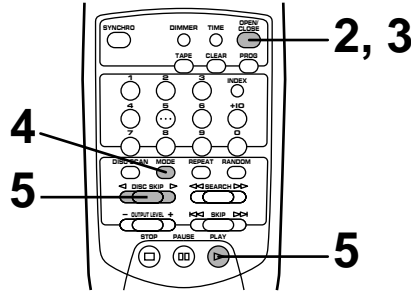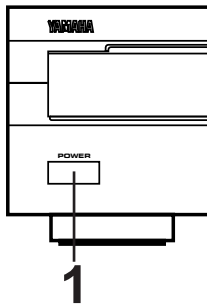


**1** Turn the power on.

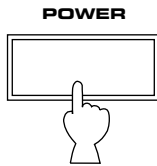 

 
**2** Open the disc tray and load discs.

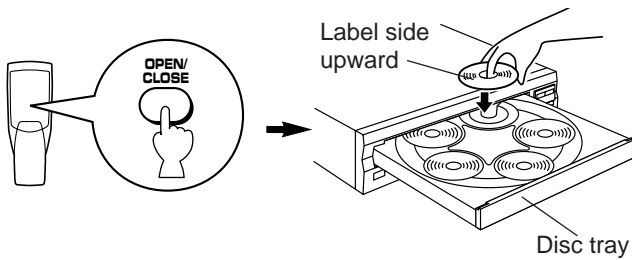

**3** Close the disc tray

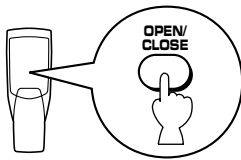 


 **4** Select a desired disc play mode (1DISC or 5DISC) confirming it on the display.

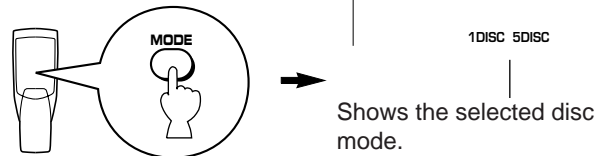


**"1DISC" mode:** The unit will play a designated disc only.  
**"5DISC" mode:** The unit will play all discs on the tray in sequence.

 **5** Start play from the first track of the disc 1.

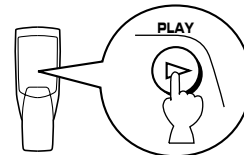

 \* If necessary, select a desired disc by using the **DISC SKIP** button or a **DISC-select** button.

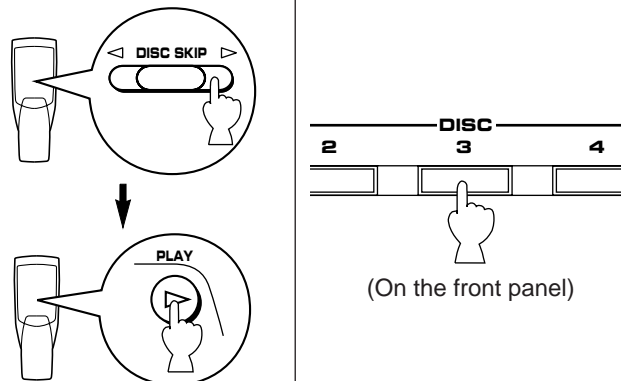


**To turn off the power**  
 Press the **POWER** switch again.



## Notes

 - After closing the disc tray by pressing the **OPEN/CLOSE** button when this unit is stopped or after selecting any disc by using the **DISC SKIP** button when this unit is stopped, the display shows the total number of tracks and the total recorded time of the selected disc for a few seconds.

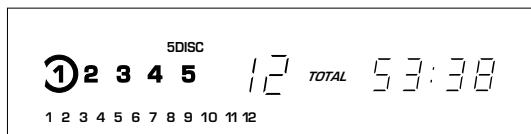

- Additionally, you can close the disc tray by pressing the **PLAY** (▶/⏮) button, a **DISC**-select button on the front panel, a numeric button or the **RANDOM** button, or by pressing the front edge of the disc tray gently. If the tray is closed in these ways, play will begin automatically, however, the display will not show the total number of tracks and the total recorded time of the first selected disc.


## PLAYXCHANGE

 During play, you can open the disc tray by pressing the **PLAYXCHANGE** button on the front panel without interrupting disc play. However, in this case, pressing the **DISC SKIP** button has no effect.

## Note


You can load or replace discs on the trays when the disc tray is opening, however, never load a disc on the tray hidden inside the unit. In doing so, the disc and the unit may be damaged, because the tray already has a disc, which is being played.

## Display information at disc play

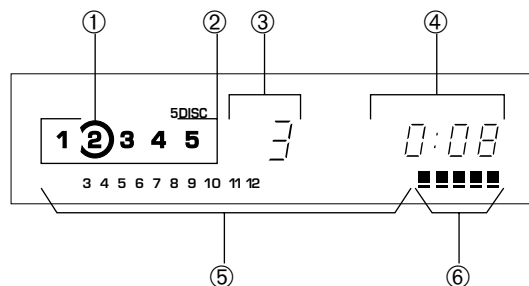


- Encloses the tray number of the selected disc.
- Lights up the tray numbers with discs only.
  - \* All tray numbers light up when the power turns on, and whenever the disc tray rotates to change a disc selected, a tray number with no disc goes off.
- Shows the selected track number.
- Shows the time displays. (Refer to "Selecting time displays" on page 11.)
- Displays the numbers that correspond to the numbers of the tracks (as high as number 20) on the selected disc. After each track is played, its corresponding number disappears so the number of remaining tracks (and their numbers) can be seen at a glance.
- CDC-765 and CDC-665 only**
  - Shows the level of signals output into an amplifier or the headphone level adjusted by using the **OUTPUT LEVEL** button.

## To stop play temporarily

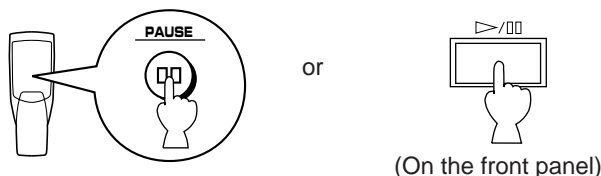 

## To stop play completely

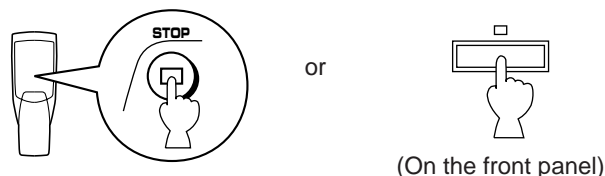 



To resume play, press the **PAUSE** button again (or press the **PLAY** button).

\* The ▶/⏮ (PLAY/PAUSE) button on the front panel can also be used to stop play temporarily or to resume play.

## To play a desired track on the disc

  
### DIRECT PLAY

Select a desired track by using the numeric buttons.

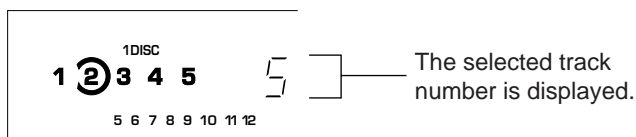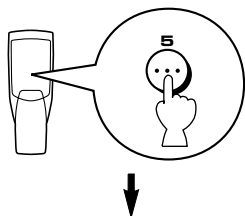

Example: To select track 25

 
Press ① twice, then immediately press ② once.

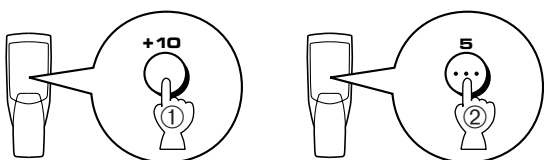


\* If a track number higher than the highest track number on the disc is selected, the last track on the disc will be played.

### SKIP PLAY

 
To play from the beginning of the track following the one now playing

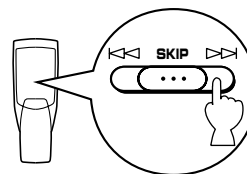

 To play from the beginning of the track now playing

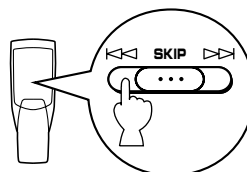

 
To play from the beginning of the track before the one now playing

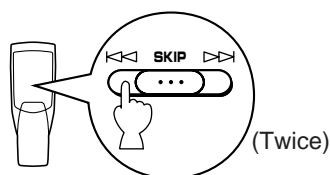


- These operations can also be performed when the unit is paused or stopped.
- When using the **SKIP** button on the remote control transmitter:  
If the button is pressed and held, the track number is continuously changed to higher numbers (or lower numbers).
- When using the **SKIP/SEARCH** buttons on the front panel:  
Be careful not to press and hold a button, otherwise the selected track is played forward (or backward) rapidly.

## To advance or reverse play rapidly (MANUAL SEARCH)
 
### To advance rapidly

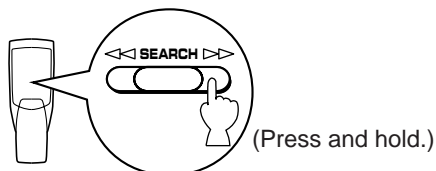

### To reverse rapidly

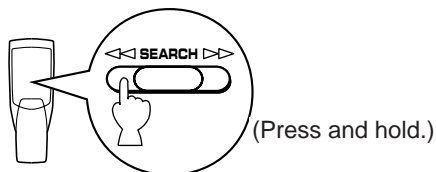 

- The sound can be heard (although slightly garbled) during manual search in either direction. This is convenient for locating a precise position within a track, or for reviewing the contents quickly.
- Manual search can also be performed while disc play is paused, though no sound will be heard.
- When using the **SKIP/SEARCH** buttons on the front panel:  
Be careful not to release the button just after it is pressed, otherwise the play is skipped to the beginning of the next track or returned to the beginning of the current track.

## Scanning discs to search for a desired disc (or to check discs on the disc tray)

When the **DISC SCAN** button is pressed when this unit is stopped, this unit will play an initial part of each disc in turn. Each disc is played for 8 seconds.

If, during this play, you find a disc that you want to listen to, press the **DISC SCAN** button once again or press the **PLAY** button to cancel this function. The unit will enter into the normal play mode.



 
### Notes

- During this play, the disc tray numbers flash on and off on the display. Every time the play of a disc is finished, the corresponding tray number is changed from flashing to lighting.
- There might be cases that you will hear no sound during disc scan. An example of this would be if the disc being played has a long blank space between tracks.


## Selecting time displays

You can select any of the four time displays by pressing the **TIME** display mode-select button.



- ① Elapsed time of the track now playing

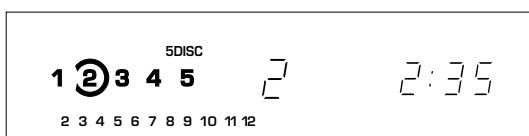


- ④ Total remaining time on the disc

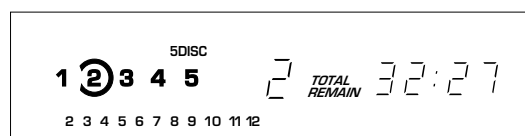 

  - ② Remaining time of the track now playing

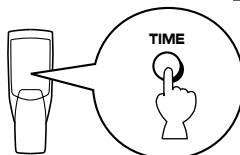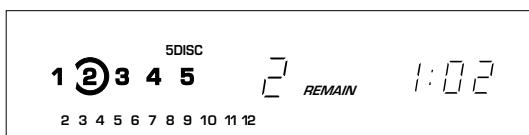

- ③ Total disc play time

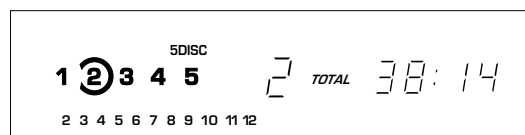 

### Note

 
The remaining time ② will not be displayed if the track number is 21 or higher.

## Changing brightness of the display


### CDC-765

You can change the brightness of the display (or turn off the illumination) by pressing the **DIMMER** button.


#### During play

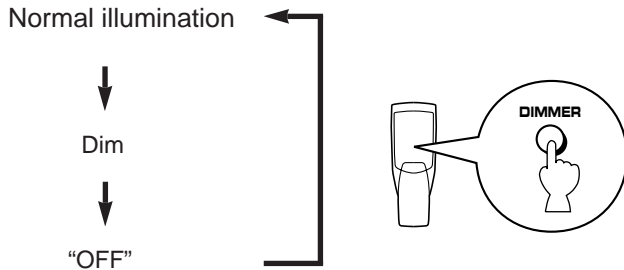

#### During stopped or paused

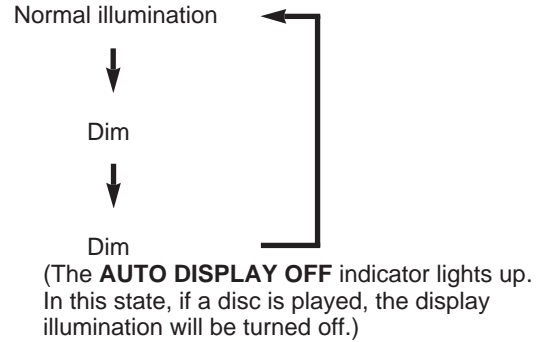 


 \* When the display illumination is off, the **AUTO DISPLAY OFF** indicator on the front panel lights up.

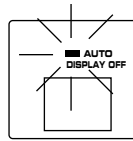

### CDC-665, CDC-565

 
If desired, you can change brightness of the display in three degrees by pressing the **DIMMER** button.

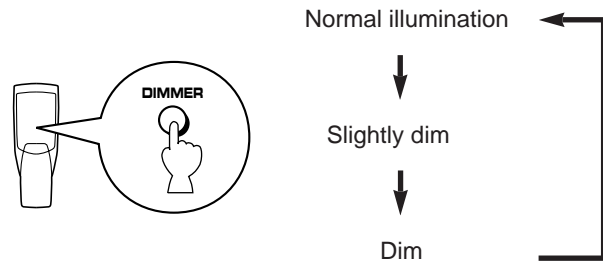

### CDC-765 and CDC-665 only

#### Adjusting the level of signals output into an amplifier, etc.

 You can adjust the level of sound signals output from the **LINE OUT** terminals on the rear panel into an amplifier, etc. as you prefer by using the **OUTPUT LEVEL** button.

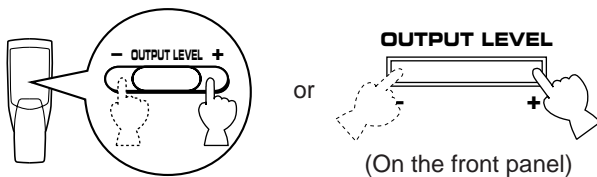


### CDC-765 and CDC-665 only


#### When you listen with headphones

Connect the headphones to the **PHONES** jack and adjust the volume by using the **OUTPUT LEVEL** button.

 \* Note that the use of the **OUTPUT LEVEL** button will also vary the level of the signal output to an amplifier, etc.

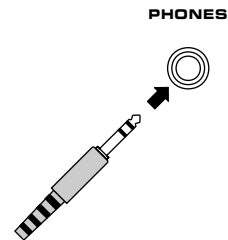

 
\* When the **DIGITAL AUDIO OUT (OPTICAL)** terminal is used for the connection, set the level of output signals to max.  
\* The level of output signals can be checked on the display.




# RANDOM-SEQUENCE PLAY

You can play the tracks in a random sequence (up to 99 tracks). The unit will automatically mix up tracks from all discs or a designated disc on the disc tray.

 
## CDC-765, CDC-665

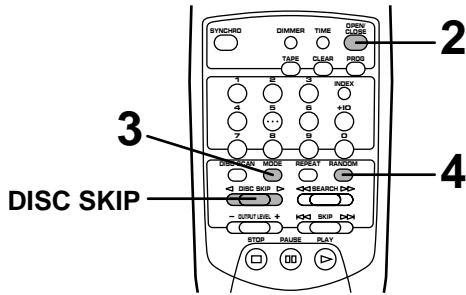


## CDC-565

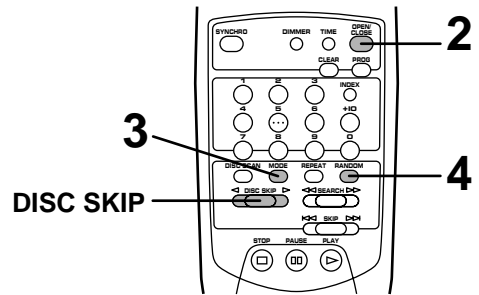 


**1** Load one or more discs.

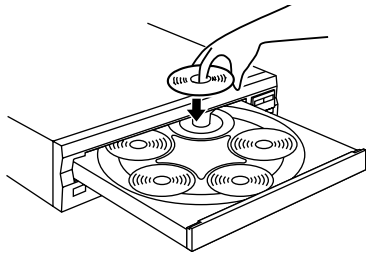 

**2** Close the disc tray.

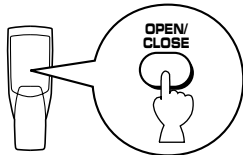 


 **3** Select a desired disc play mode (1DISC or 5DISC).

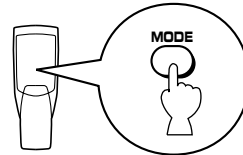

\* If you select "1DISC" mode, next select a desired disc by using the **DISC SKIP** button on the remote control transmitter or a **DISC-select** button on the front panel.

**4**

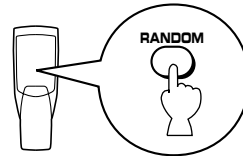 


"RNDM" lights up on the display.

## To cancel random-sequence play

Press the **STOP** button or **RANDOM** button once again, or open the disc tray by pressing the **OPEN/CLOSE** button. "RNDM" disappears from the display.

## Notes

 
 
- This feature will not function during programming, or during program play.
- If the **SKIP** button is pressed during random-sequence play, the next randomly programmed track will be played. If the **SKIP** button is pressed, play will return to the beginning of the track now being played.
-  This indication appears while the unit is mixing up tracks.
- Total remaining time on the disc will not be displayed during random-sequence play.

# PROGRAM PLAY


You can enjoy listening to your favorite tracks selected from one or more discs in any desired order by programming tracks.

## CDC-765, CDC-665

## CDC-565

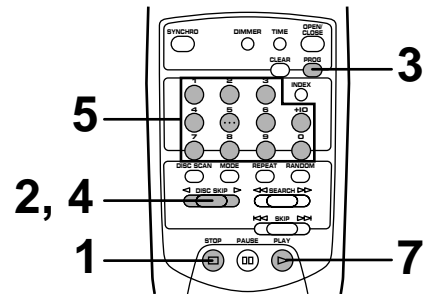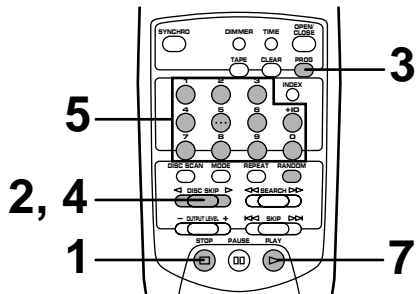


**1** Stop the unit.

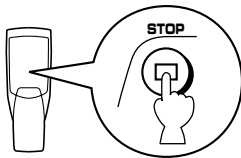 


**2** If you will select tracks from a disc (or discs) other than the disc on the Disc 1 tray, make this unit display the total recorded time of each disc to be used by pressing the **DISC SKIP** button in turn.

 
\* Without this operation, the total time of the programmed tracks will not be displayed during programming.

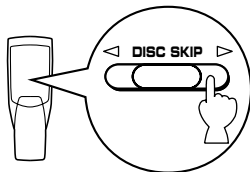

 
**3** Press the **PROG** button to begin programming.

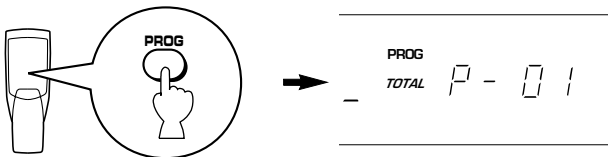

 **4** If necessary, select a desired disc.

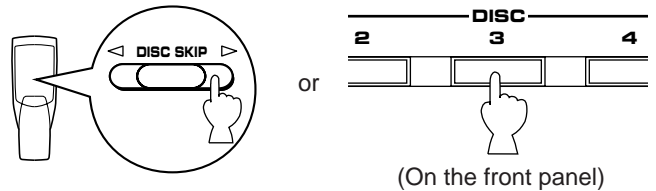


 **5** Program a desired track by pressing the corresponding numeric button.

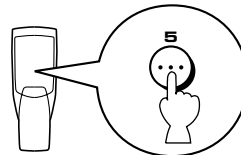


**6** Repeat steps 4 – 5 to program more tracks. You can select the same track again.

 **7** When the programming is completed;

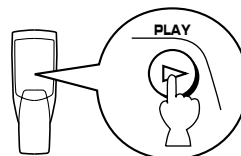

## Display information during programming

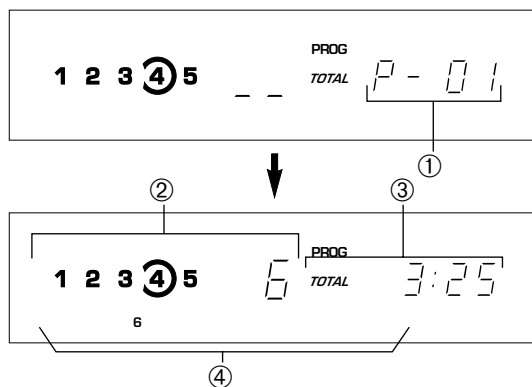 

- ① Shows the program number for the track to be programmed next.
- ② Shows the selected disc and track number.
- ③ Shows the total time of the tracks currently programmed.
- ④ Shows only the numbers of programmed tracks on the selected disc.

\* If "P-01" does not appear on the display after the **PROG** button is pressed, press the **TIME** display mode-select button.

\* If the total time exceeds 99 minutes and 59 seconds, the time will not be displayed.

### Notes

- You can program as many as 40 tracks at one time.
- You can program a whole disc by pressing "0", instead of one track. At that time, "AL" flashes on the display.
- The total time of the programmed tracks will not be displayed, if a track number higher than 20 is programmed.
- If, during programming, the **TIME** display mode-select button is pressed, the program number display can be changed to display the total time of the programmed tracks or no information. To return to the previous display, press the **TIME** display mode-select button once again.
- The **SKIP** (◀◀ and ▶▶) button can be used during playing, but only within the range of the programmed tracks.
- The **SEARCH** (◀◀ and ▶▶) button can be used during playing to search all tracks, including unprogrammed tracks.

## To stop program play

Press the **STOP** button. The first programmed track number will be displayed.

To resume play, press the **PLAY** button. Play will begin from the beginning of the program.

## To cancel a programmed sequence

There are several methods, as described below.

- Press the **STOP** button or the **CLEAR** button while the unit is stopped.
- Open the disc tray.
- Switch off the power.

## To check program data

1. If during program play, press the **STOP** button.
2. Press the **PROG** button.
3. Each time the **SKIP** ▶▶ button is pressed, the track numbers and sequential order of the programmed tracks can be checked one after another. The display of the track number can be returned (sequentially in reverse order) by pressing the **SKIP** ◀◀ button.

 
 
## To correct program data

1. Follow the procedure described in "To check program data".
2. Display the track number to be corrected by pressing the **SKIP** button.
3. Press a numeric button to select a track to replace the one displayed. The previously programmed track will be cleared from the memory and the new one will be programmed.
4. After the correction has been completed, press the **PROG** button or **PLAY** button once again.

# PROGRAM FILING

for CDC-765 only


You can make this unit store (file) program data of your own choosing. With this function, you can play a disc with your favorite program at any time without making it again. However, note that you can not file program data which consists of tracks selected from more than one disc.

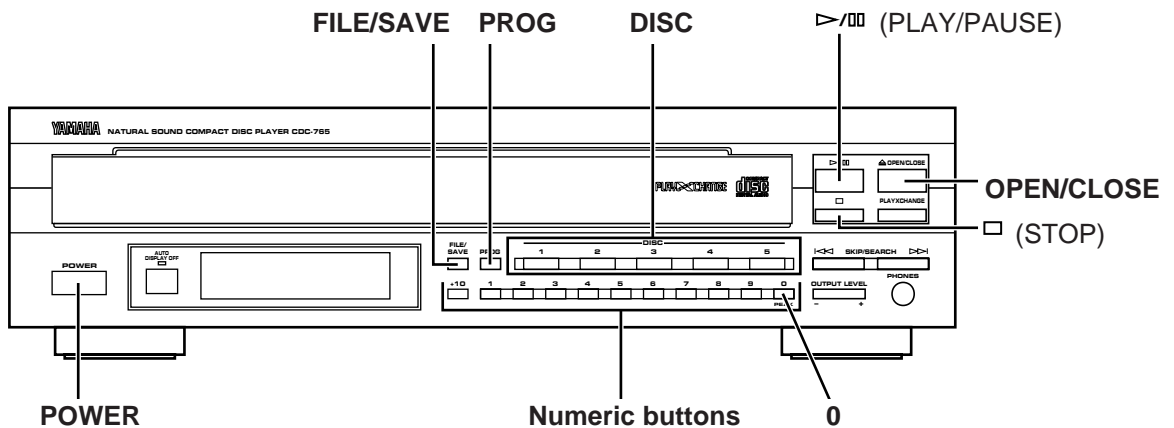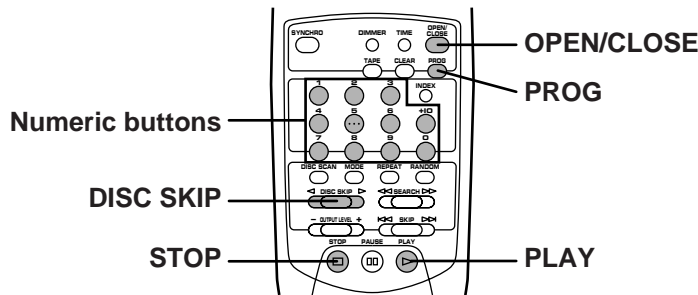


## To file program data

**1** Follow step 1 – 4 on page 14.

 **2** Select track numbers in a desired order.

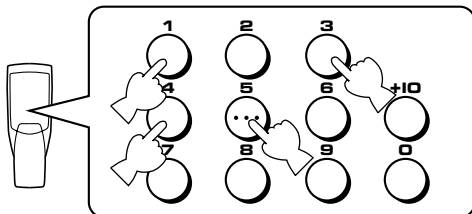

 \* If programming of tracks has already completed, make sure that "TRACK" is flashing continuously on the display. If it is not flashing, press the **PROG** button. (If a program play is being performed, press the **STOP** button, and then press the **PROG** button.)

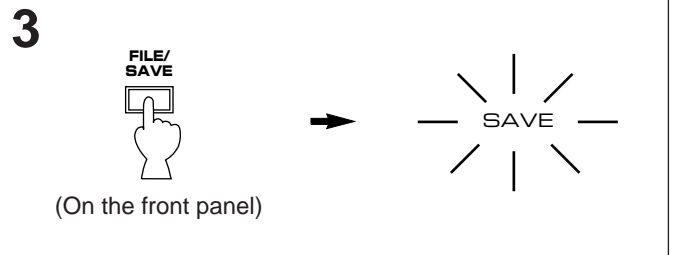


### Notes


- Program data filed in this way can be retained for about two weeks with the power switched off.
- One program data can be filed for one disc. If different program data is filed for a disc, the previous program data will be deleted from the file, and only the new program data will be retained in the file.
- Program data for a total of as many as about 100 discs can be filed.





## To play with program data

 - 1** Load a disc which has its program data in this unit's memory's file.

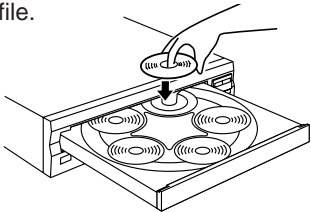
- 2** Close the disc tray.

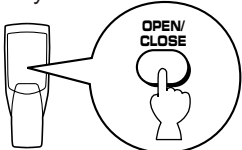  
- 3** If "FILE" is not illuminated on the display, press the **FILE/SAVE** button on the front panel.

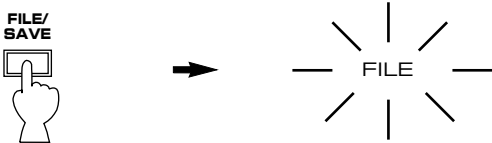
- 4** Select the disc to be played.

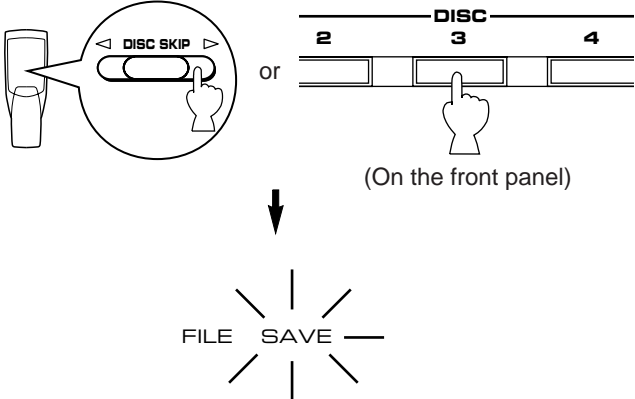 


(On the front panel)


### Notes

 
- If, in step 4, "SAVE" will not light up, the disc does not have its program data in the memory's file.
- To stop play with the filed program data and change to normal disc play, press the **FILE/SAVE** button, and then press the **STOP** button. By doing so, the disc will be played in the original sequence of tracks, but the program data in the memory's file for the disc will not be deleted. To call out the program data again, follow step 3.
- In the "5DISC" disc play mode, discs which have program data in the memory's file are played with their own program data, and others are played normally.
- In the "1DISC" disc play mode, if the **RANDOM** button is pressed after selecting the disc in step 4, only the programmed tracks on the disc are played in a random-sequence. However, if the **RANDOM** button is pressed in the "5DISC" disc play mode, a random-sequence play is performed among not only programmed tracks on the discs which have their program data in the memory's file but also all tracks on the other discs on the disc tray which do not have their program data in the memory's file.

## To delete program data from file

- 1** If the unit is playing a disc, press the **STOP** button.  
\* If a program play is on standby, press the **STOP** button to cancel that program sequence.
- 2** If "FILE" is illuminated on the display, press the **FILE/SAVE** button to turn it off.
- 3** Select the disc of which program you want to delete.

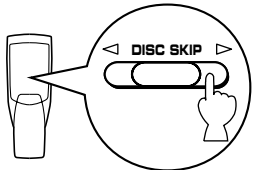
- 4**

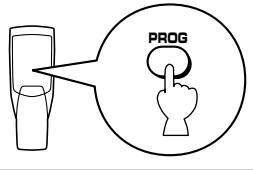 

- 5**

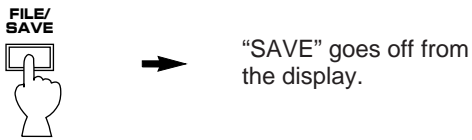 


"SAVE" goes off from the display.


## To delete all program data from the memory's file

 - 1** Turn the **POWER** off.
- 2**

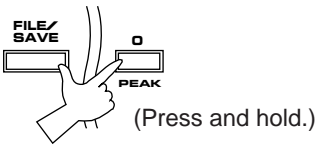

 (Press and hold.)
- 3** Turn the power on.

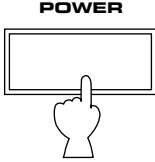

- 4**

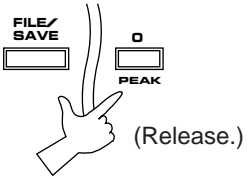 

(Release.)

# REPEAT PLAY

 You can play any desired track or disc (or a set of discs) repeatedly by pressing the **REPEAT** button. The repeat play mode will change whenever you press the **REPEAT** button.

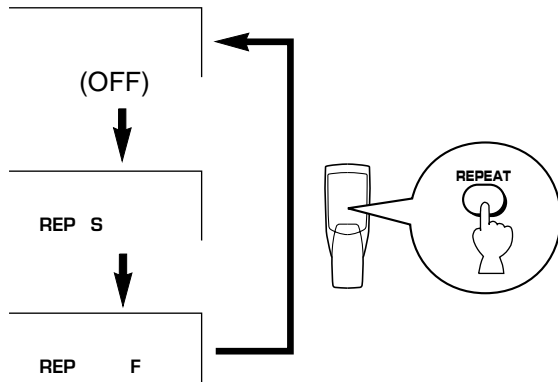

## SINGLE REPEAT (REP S)

A single track is repeatedly played.

\* This is also available in the program play mode and the random-sequence play mode. (If the repeat play mode is switched off, the program play mode or the random-sequence play mode will be resumed.)

## FULL REPEAT (REP F)

In the "1DISC" disc play mode: A designated disc is played repeatedly played.

 
In the "5DISC" disc play mode: All discs on the disc tray are repeatedly played.

- \* In the program play mode, all programmed tracks are repeatedly played.
- \* In the random-sequence play mode, all randomly sequenced tracks are repeatedly played in the same order.

# INDEX SEARCH

If the disc includes index numbers, play can be started from any desired index number.


**1** Select a track which has index numbers.

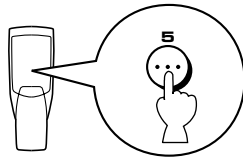

**2** Press the **INDEX** button. The display shows track 4, 5, and the INDEX indicator.

The illustration shows a hand pressing the 'INDEX' button on a disc tray. A speech bubble contains the word 'INDEX' and a hand icon pointing to it. To the right, the display shows '4 5' and 'INDEX' with a small '1' in a box. Below the display, the numbers '7 8 9 10 11 12' are visible.

 **3** Select the desired index number.

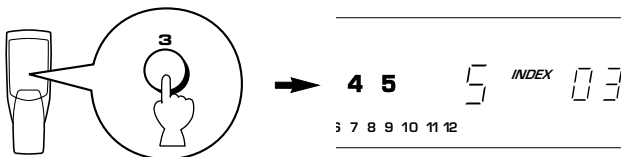

## To cancel the index search function

Press the **INDEX** button.

### Notes

- Not all discs have index numbers. The index system is a method for sub-dividing tracks into smaller divisions (such as, for example, the movements within classical symphonies) for easier location of those parts. The liner notes with the disc usually tell if such index numbers are included.
- If an index number is selected that is higher than any index number on that disc, play will start from the last index number point on the disc.
- For some discs, play may begin slightly prior to the actual designated index point.
- If the disc has no encoded index points, play will begin from the start of the selected track.
- The index number can be designated only while "INDEX" is illuminated on the display.

 
# CD SYNCHRONIZED RECORDING

This unit can make a tape deck's recording synchronized with CD play automatically. With this function, you can record a CD on tape very easily and more precisely.


This recording method needs a YAMAHA tape deck compatible with this function. (Refer to the tape deck's operation manual to know whether it is compatible or not.)

\* This unit and the tape deck must be placed close to each other so that both of them can receive the signals from this unit's remote control transmitter at the same time.


## CDC-765, CDC-665

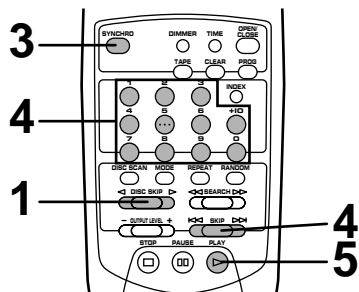

## CDC-565

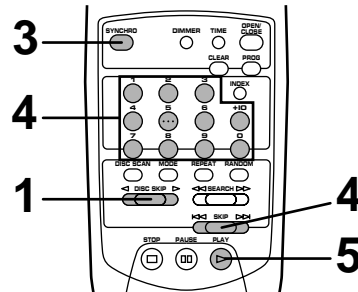 

### 1 Select a disc.

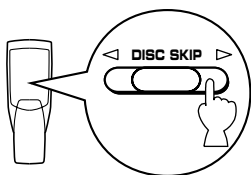 


### 2 Load a tape on the tape deck.

\* **CDC-765 and CDC-665 only**

The peak level searching function of this unit is useful for adjusting recording level on the tape deck. (Refer to page 23.)

 
### 3

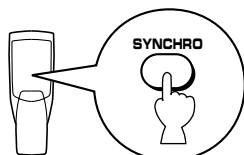


This unit enters into the pause mode, and the tape deck enters into the REC/PAUSE mode.

\* In this mode, the time display on this unit flashes on and off.

### 4 If desired, select the track to be recorded first.

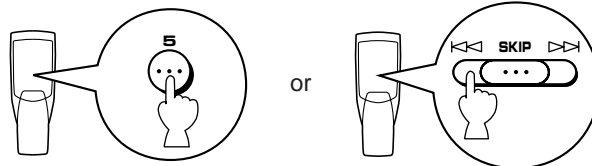 

### 5

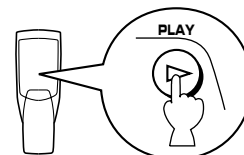 

Both CD play and tape deck recording begin.  
\* CD play begins a little later than recording.

### 6 If you want to stop recording temporarily and restart recording from a desired track, follow steps 3–5 again.

#### To cancel this function

Press the **STOP** button.

#### Notes

- To finish or stop the recording, press the "STOP" button on the tape deck.
- Programmed sequence of tracks can also be recorded with this function, instead of recording an entire disc. (Refer to page 14–15 for the programming procedure.)
- CDC-765 and CDC-665 only**

This function can also be used together with the automatic tape-programming function. (Refer to page 20–22.)

 
# TRACK PROGRAMMING FOR RECORDING TO TAPE

## for CDC-765 and CDC-665 only


This convenient feature can be used to program tracks for recording to tape. By only memorizing the tape's total possible recording time, the unit will automatically program tracks or help you to program tracks so they will fit onto the tape with the least amount of unrecorded space remaining at each end of the tape.

### Automatic tape programming


The unit will automatically program tracks on a disc with the original order of tracks unchanged.

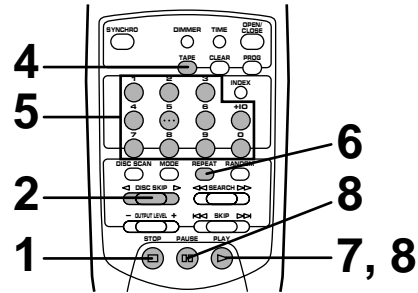

**1** Stop the unit.

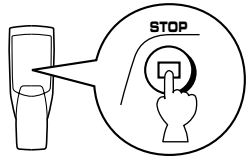 


**2** Select the disc.

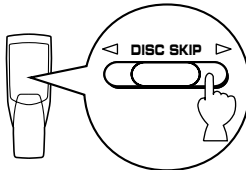 


**3** The peak level searching function of this unit is useful for adjusting recording level on the tape deck. (Refer to page 23.)

 **4** Enter the tape's total possible recording time (tape length).

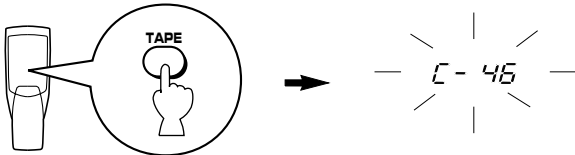

 You can select any of four tape lengths by pressing the **TAPE** button.

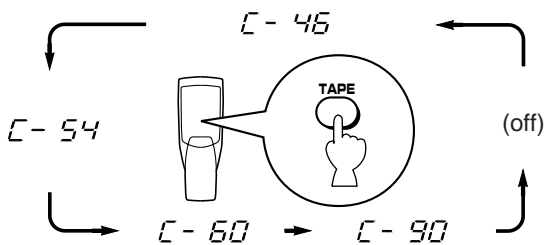


**5** Otherwise, you can also enter the tape's total possible recording time manually.

**Example:** For a C-64 tape (32 minutes on each side)



 **6** Press the **REPEAT** button.

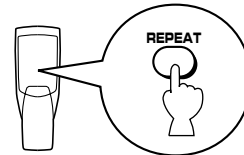


The unit automatically programs tracks for side A and side B separately considering the tape's total time.

**7** Begin recording on the tape deck and press the **PLAY** button on this unit at the same time.

**8** The unit will pause at the end of side A of the tape. Turn the tape over to side B. Resume recording and, at the same time, press the **PLAY** or **PAUSE** button on this unit.

#### Notes

 - All tracks may not be programmed if the tape's length is not enough. To program all tracks, use a longer tape.
- In step 6, you can check the program data for side A and side B.

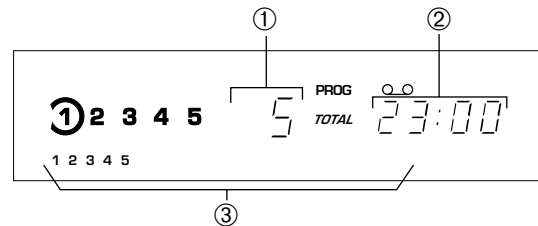


- Shows the number of programmed tracks for each side in turn just after the automatic programming is finished, and then it is replaced by the number of the first programmed track for side A.
- Shows the total time of programmed tracks for each side.
- Shows the programmed track numbers for each side.


- CD synchronized recording function can be used if your tape deck is compatible with it. In this case, in step 7 and 8, press the **SYNCHRO** button and then press the **PLAY** button on this unit's remote control transmitter. Recording automatically begins. (For details, refer to page 19.)

## Manual tape programming

 This is for recording desired tracks selected from one or more discs in any desired order onto tape.

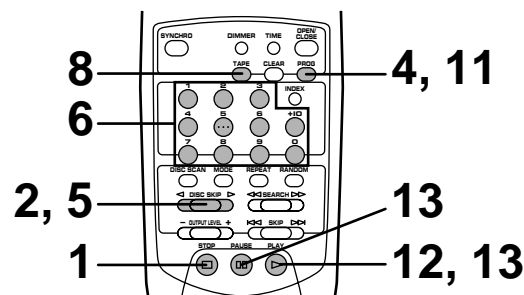


### 1 Stop the unit.

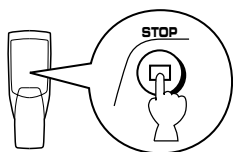 


### 2 If you will select tracks from a disc (or discs) other than the disc on the Disc 1 tray, make this unit display the total recorded time of each disc to be used by pressing the **DISC SKIP** button in turn.

\* This unit will read the contents of a disc by this operation. If there is a disc to which this operation is omitted, tracks on the disc cannot be programmed.

 
### 3 Follow step 4 and 5 on page 20.

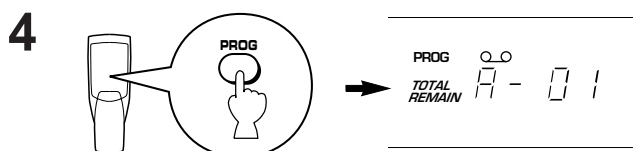

### 5 If necessary, select a desired disc.

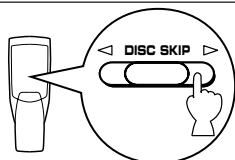 


### 6 Select a desired track.

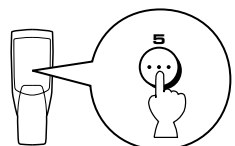 

### 7 Repeat step 5 and 6 to program more tracks for side A of the tape. You can select the same track again.

\* If "E rr" appears on the display, the track number just selected cannot be programmed because there is not enough time remaining on side A of the tape.
 
### 8 When you finish the programming for side A, program the pause mode by pressing the **TAPE** button.

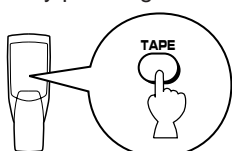

\* "Pu" flashes on the display, and after then you can begin programming for side B.

### 9 Follow step 5 and 6.

### 10 Repeat step 5 and 6 to program more tracks for side B of the tape. You can select the same track again.

\* If "E rr" appears on the display, the track number just selected cannot be programmed because there is not enough time remaining on side B of the tape.

### 11 The peak level searching function of this unit is useful for adjusting recording level on the tape deck. For peak level searching, when the programming for side B is finished, press the **PROG** button and then press the **PEAK** button on the front panel. (Refer to page 23.)

### 12 Begin recording on the tape deck and press the **PLAY** button on this unit at the same time.

### 13 The unit will pause at the end of side A of the tape. Turn the tape over to side B. Resume recording and, at the same time, press the **PLAY** or **PAUSE** button on this unit.

 
#### Notes

- In step 7 and 10, even if "E rr" appears on the display, you can program another track of which time is shorter than the remaining time on the side of the tape. At this time, if any other track number is flashing continuously on the display, you can program it.
- CD synchronized recording function can be used if your tape deck is compatible with it. In this case, in step 12 and 13, press the **SYNCHRO** button and then press the **PLAY** button on this unit's remote control transmitter. Recording automatically begins. (For details, refer to page 19.)

#### Notes on tape programming

- To check, cancel or correct program data, refer to page 15.
- The maximum number of tracks that can be programmed is 40. If, however, the PAUSE mode is inserted, it is counted as one track.
- This function can be used to program up to track number 20. If the disc has more than 20 tracks, track number 21 and thereafter will not be programmed.

## Display information during programming

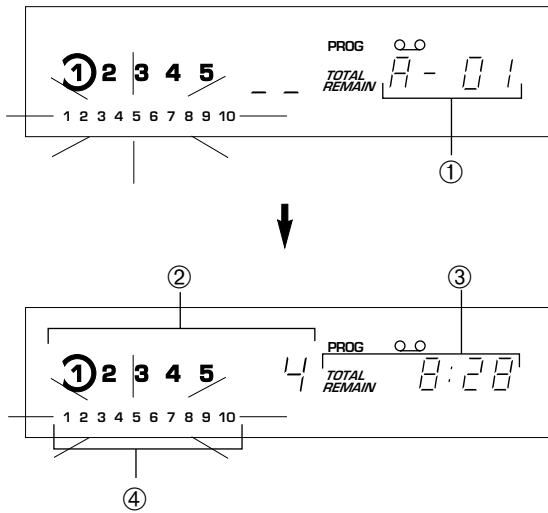


- ① Shows the side of the tape and the program number for the track to be programmed next.
- ② Shows the selected disc and track number.
- ③ Shows the total remaining time on the side of the tape.
- ④ Programmed track numbers light up and programmable track numbers among the unprogrammed ones flash on and off.


\* If "A-01" does not appear on the display after the **PROG** button is pressed, press the **TIME** display mode-select button.

\* If, during programming, the **TIME** display mode-select button is pressed, the program number display can be changed to display the total remaining time on the side of the tape. To return to the previous display, press the **TIME** display mode-select button once again.

## ■ Random sequential tape programming

  The unit will automatically program tracks on a disc in random sequential order for recording to tape.

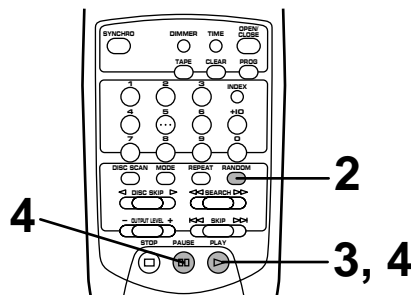


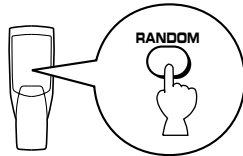- 1** Follow step 1 – 5 on page 20.
- 2**


\* The unit will automatically program tracks for side A and side B separately considering the tape's total time.
- 3** Begin recording on the tape deck and press the **PLAY** button on this unit at the same time.
- 4** The unit will pause at the end of side A of the tape. Turn the tape over to side B. Resume recording and, at the same time, press the **PLAY** or **PAUSE** button on this unit.

### Notes

 - Because the programmed data changes every time the **RANDOM** button is pressed, the amount of time remaining at the end of the tape also changes accordingly.
- If the tape's length is not enough, all tracks cannot be programmed. In this case, exchange the tape for a longer one.
- In step 2, you can check the program data for side A and side B.


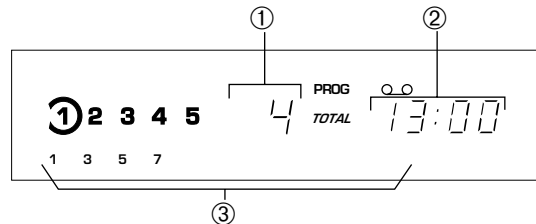


- ① Shows the number of programmed tracks for each side in turn just after the automatic programming is finished, and then it is replaced by the number of the first programmed track for side A.
- ② Shows the total time of programmed tracks for each side.
- ③ Shows the programmed track numbers for each side.


• CD synchronized recording function can be used if your tape deck is compatible with it. In this case, in step 3 and 4, press the **SYNCHRO** button and then press the **PLAY** button on this unit's remote control transmitter. Recording automatically begins. (For details, refer to page 19.)

## Automatic searching for the peak level on a disc for CDC-765 and CDC-665 only

  
This convenient feature automatically searches a disc for a part where the source level peaks, and next plays the part repeatedly. For recording to tape, this feature is very helpful to adjust the recording level on the tape deck.

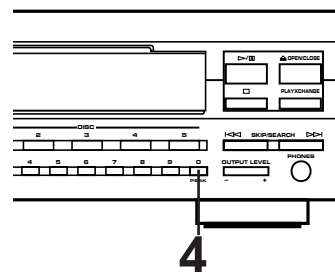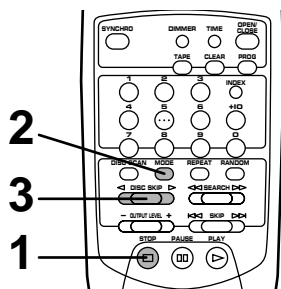


### 1 Stop the unit.

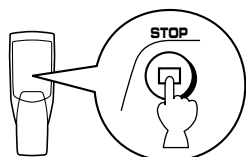 


### 2 Select the "1DISC" disc play mode.

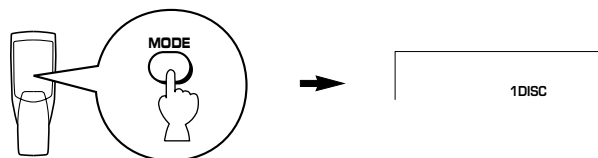 


### 3 Select the disc.

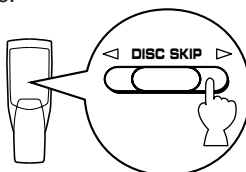 


### 4

 

(On the front panel)

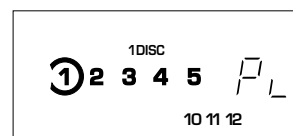 

 The peak level search is performed on the disc.

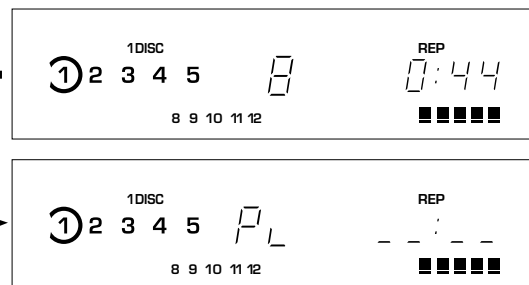

Next, the part where the source level peaks is repeatedly played. Adjust the recording level on the tape deck listening to this repeat play.

### To cancel this function

 
Press the **STOP** button.

### Notes

- Even if the peak level search is performed twice or more on the same disc, the same part will not be always selected, because this unit will search for the peak level among parts on the disc that are randomly selected by the internal microcomputer.
- In the program play mode, this feature will function among the programmed tracks only. If program play is being performed, first press the **STOP** button, and then press the **PEAK** button. If program play is not being performed, only press the **PEAK** button.
- To search for the peak level through all discs on the disc tray, in step 2, select the "5DISC" disc play mode.

# NOTES ABOUT THE REMOTE CONTROL TRANSMITTER

## Battery installation

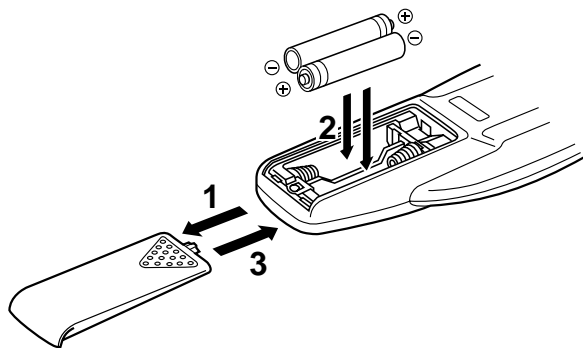


## Battery replacement

If you find that the remote control transmitter must be used closer to the main unit, the batteries are weak. Replace both batteries with new ones.

### Notes

- Use only AA, R6, UM-3 batteries for replacement.
- Be sure the polarities are correct. (See the illustration inside the battery compartment.)
- Remove the batteries if the remote control transmitter will not be used for an extended period of time.
- If batteries leak, dispose of them immediately. Avoid touching the leaked material or letting it come in contact with clothing, etc. Clean the battery compartment thoroughly before installing new batteries.

 
## Remote control transmitter operation range

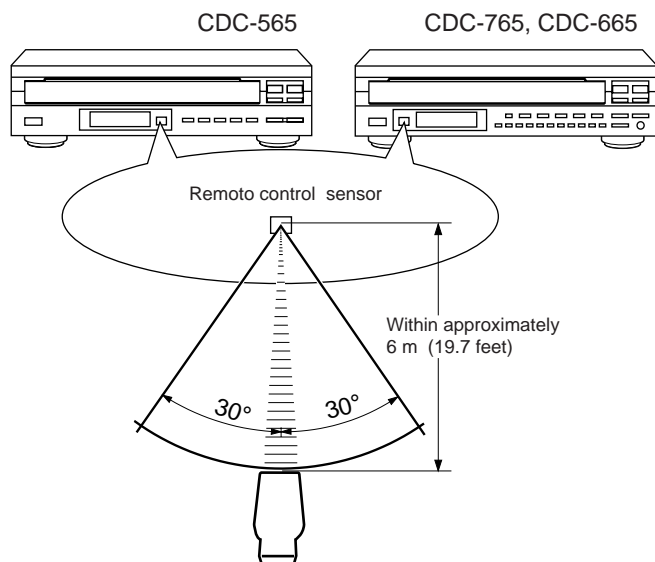


### Notes


- There should be no large obstacles between the remote control transmitter and the main unit.
- If the remote control sensor is directly illuminated by strong lighting (especially an inverter type of fluorescent lamp etc.), it might cause the remote control transmitter not to work correctly. In this case, reposition the main unit to avoid direct lighting.

# NOTES ABOUT HANDLING COMPACT DISCS

 - This compact-disc player is designed only for playing of compact discs bearing the  mark. Never attempt to load any other type of disc into the unit. The unit will also play 3-inch (8-cm) compact discs.
- To remove a disc from its storage case, open the case and then press down at the center; with a finger through the center hole and the outer edges held as shown in the illustration, lift the disc out carefully.

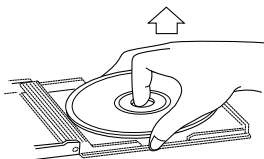


 - Always handle the disc with care so that its surface is not scratched.

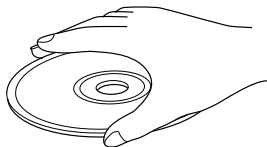

- Compact discs are not subjected to wear during play, but damage to the disc surface when the disc is being handled can adversely affect the disc's play.

 - Compact discs are not affected by small particles of dust or fingerprints on their playing surface, but even so they should be kept clean. Wipe by using a clean, dry cloth. Do not wipe with a circular motion; wipe straight outward from the center.

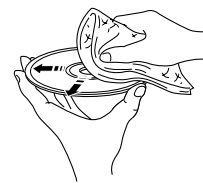

- Do not try to clean the disc's surface by using any type of disc cleaner, record spray, anti-static spray or liquid, or any other chemical-based liquid, because such substances might irreparably damage the disc's surface.
- Do not expose discs to direct sunlight, high temperature or high humidity for a long period of time, because these might warp or otherwise damage the disc.



## To play a 3-inch (8-cm) CD

Place it in the inner recessed area of the disc tray. Do not put a normal (5-inch/12-cm) CD on top of a 3-inch CD.



## TROUBLESHOOTING

If the unit fails to operate normally, check the following points to determine whether the problem can be corrected by the simple measures suggested. If it cannot, or if the problem is not listed in the SYMPTOM column, disconnect the unit's power cord and contact your authorized YAMAHA dealer or service center for help.

| SYMPTOM   | PROBABLE CAUSE   | REMEDY   |
|---|--|--|
| <b>This unit does not switch ON when the POWER switch is pressed.</b> | The power cord is not connected or not completely connected.   | Securely connect the power cord.   |
| <b>The disc tray does not close completely.</b>                       | A foreign object is obstructing the tray.  | Carefully check the disc tray and remove the foreign object.                             |
| <b>A disc number does not light up on the display.</b>                | The disc has been loaded upside down.  | Reload the disc with the label side up.  |
|   | The disc is damaged.   | Check the disc carefully; replace it if necessary.                                       |
|   | There is moisture on the laser pickup.   | Wait 20 to 30 minutes after switching the unit ON before trying to play a disc.          |
| <b>Play does not begin.</b>   | The disc has been loaded upside down.  | Reload the disc with the label side up.  |
|   | The disc is dirty.   | Clean the disc.  |
| <b>Play is delayed, or begins at the wrong place.</b>                 | The disc may be scratched or damaged.  | Check the disc carefully; replace it if necessary.                                       |
| <b>No sound.</b>  | Improper output cable connections.   | Connect the cables properly. If the problem persists, the cables may be defective.       |
|   | Improper amplifier operation.  | Set the amplifier controls to the correct input selection.                               |
| <b>Sound "skips".</b>   | This unit is being subjected to vibrations or impacts.   | Relocate this unit.  |
|   | The disc is dirty.   | Clean the disc.  |
| <b>Sound "hums".</b>  | Improper cable connections.  | Securely connect the audio cables. If the problem persists, the cables may be defective. |
| <b>Noise from a nearby tuner.</b>                                     | The tuner is too close to this unit.   | Move the tuner and this unit farther apart.  |
| <b>Noise from inside of the disc tray.</b>                            | The disc may be warped.  | Replace the disc.  |
| <b>The remote control transmitter does not work.</b>                  | The batteries of this remote control transmitter are too weak.   | Replace the batteries with new ones.   |
|   | Direct sunlight or lighting (of an inverter type of fluorescent lamp etc.) is striking the remote control sensor of the main unit. | Change position of the main unit.  |

## SPECIFICATIONS

### AUDIO SECTION

|                                   |                             |
|-----------------------------------|-----------------------------|
| Frequency response                | 2 Hz – 20 kHz, $\pm 0.5$ dB |
| Harmonic distortion+noise (1 kHz) |                             |
| <CDC-765, CDC-665>                | 0.003% or less              |
| <CDC-565>                         | 0.004% or less              |
| S/N ratio                         |                             |
| <CDC-765, CDC-665>                | 106 dB or more              |
| <CDC-565>                         | 102 dB or more              |
| Dynamic range                     |                             |
| <CDC-765, CDC-665>                | 96 dB or more               |
| <CDC-565>                         | 95 dB or more               |
| Wow & flutter                     | Unmeasurable                |
| Output voltage (1 kHz, 0 dB)      | 2.0 $\pm$ 0.5V              |
| Headphones output (-20 dB)        | 200 $\pm$ 40 mV/150 ohms    |

### GENERAL

#### Power requirements

|                          |                            |
|--------------------------|----------------------------|
| U.S.A. and Canada models | 120V, 60 Hz                |
| Australia model          | 240V, 50 Hz                |
| Europe and U.K. models   | 230V, 50 Hz                |
| General model            | 110/120/220/240V, 50/60 Hz |

Power consumption ..... 20W

Dimensions (W x H x D) ..... 435 x 116 x 388 mm  
(17-1/8" x 4-9/16" x 15-1/4")

Weight ..... 5.8 kg (12 lbs. 12 oz.)

Accessories ..... Connection cord  
Remote control transmitter  
Batteries (size AA, R6,UM-3)

Please note that all specifications are subject to change without notice.

# YAMAHA

---

YAMAHA ELECTRONICS CORPORATION, USA 6660 ORANGETHORPE AVE., BUENA PARK, CALIF. 90620, U.S.A.  
YAMAHA CANADA MUSIC LTD. 135 MILNER AVE., SCARBOROUGH, ONTARIO M1S 3R1, CANADA  
YAMAHA ELECTRONIK EUROPA G.m.b.H. SIEMENSSTR. 22-34, D-25462 RELLINGEN BEI HAMBURG, F.R. OF GERMANY  
YAMAHA ELECTRONIQUE FRANCE S.A. RUE AMBROISE CROIZAT BP70 CROISSY-BEAUBOURG 77312 MARNE-LA-VALLÉE CEDEX02, FRANCE  
YAMAHA ELECTRONICS (UK) LTD. YAMAHA HOUSE, 200 RICKMANSWORTH ROAD WATFORD, HERTS WD1 7JS, ENGLAND  
YAMAHA SCANDINAVIA A.B. J A WETTERGRENS GATA 1, BOX 30053, 400 43 VÄSTRA FRÖLUNDA, SWEDEN  
YAMAHA MUSIC AUSTRALIA PTY, LTD. 17-33 MARKET ST., SOUTH MELBOURNE, 3205 VIC., AUSTRALIA

YAMAHA CORPORATION  
VV35930