

PRECAUTIONS

For the electric components of instruments such as Guitar, Wind, String, and Percussion.

PLEASE READ CAREFULLY BEFORE PROCEEDING

Especially in the case of children, a guardian should provide guidance on how to properly use and handle the product before actual use.

Please keep this document for future reference.

 **WARNING**

Always follow the basic precautions listed below to avoid the possibility of serious injury or even death from electrical shock, short-circuiting, damages, fire or other hazards. These precautions include, but are not limited to, the following:

Power supply

- Do not place the power cord near heat sources such as heaters or radiators. Also, do not excessively bend or otherwise damage the cord, or place heavy objects on it.
- Do not touch the product or the power plug during an electrical storm.
- Use only the correct voltage specified for the product. The required voltage is printed on the name plate of the product.
- Use only the supplied or specified AC adaptor, power cord, plug or USB (power) cable.
- Do not use the supplied AC adaptor, power cord, plug, or USB (power) cable for other devices.
- Check the power plug periodically and remove any dirt or dust which may have accumulated on it.
- Insert the power plug firmly all the way into the AC outlet. Using the product when it is not plugged in sufficiently can cause dust to accumulate on the plug, possibly resulting in fire or skin burns.
- When setting up the product, make sure that the AC outlet you are using is easily accessible. If some trouble or malfunction occurs, immediately turn off the power switch and disconnect the plug from the outlet. Even when the power switch is turned off, as long as the power cord is not unplugged from the wall AC outlet, the product will not be disconnected from the power source.
- Do not connect the product to an electrical outlet using a multi-plug outlet extender. Doing so can result in lower sound quality, or possibly cause fire at or around the outlet.
- When disconnecting the power plug, always hold the plug itself and not the cord. Pulling by the cord can damage it and cause electric shock or fire.
- If not using the product for long periods of time, be sure to pull the power plug from the AC outlet.

(For products with a grounded power cord)

- Be sure to connect to an appropriate outlet with a protective grounding connection. Improper grounding can result in electrical shock.

Do not disassemble

- This product contains no user-serviceable parts. Do not attempt to disassemble the internal parts or modify them in any way.

Water warning

- Do not expose the product to rain, use it near water or in damp or wet conditions, or place on it any containers (such as vases, bottles or glasses) containing liquids which might spill into any openings or places where water may drop. A liquid such as water getting into the product may cause fire, electric shock, or malfunctions.

(For products using an AC adaptor)

- Use the AC adaptor indoors only. Do not use it in any wet environments.
- Never insert or remove a power plug with wet hands.

Fire warning

- Do not place any burning items or open flames near the product, since they may cause fire.

Wireless unit (for products that can be used with Wi-Fi, Bluetooth, etc.)

- Radio waves from this product may affect electro-medical devices, such as a heart pacemaker implant or defibrillator implant.
 - Do not use the product near medical devices or inside medical facilities. Radio waves from this product may affect electro-medical devices.
 - Do not use the product within 15 cm (6 in.) of persons with a heart pacemaker implant or a defibrillator implant.

Battery warnings (for products using batteries)

- Do not dispose of a battery in a fire.
Doing so may result in the battery rupturing or exploding, and cause fire or injury.
- Do not expose the battery to conditions of extreme low air pressure, cold or heat (such as in direct sunlight or a fire).
Doing so may result in the battery rupturing or exploding, and cause fire or injury.
- Do not disassemble batteries.
Doing so could result in fire, overheating, rupture, explosion, or leakage, causing burns or injury.
- Follow the precautions below. Failure to do so could result in fire, overheating, leakage, or malfunction causing burns or injury.
 - Use the specified battery type only.
 - Do not use new batteries together with old ones.
 - Do not mix battery types.
 - Always make sure all batteries are inserted in conformity with the +/- polarity markings.
 - When the batteries run out, or if the product is not to be used for a long time, remove the batteries from the product.
- Do not attempt to recharge batteries that are not designed to be charged. Doing so could result in rupture or leakage causing injury, etc.
- If the batteries do leak, avoid contact with the leaked fluid. If the battery fluid should come in contact with your eyes, mouth, or skin, wash immediately with water and consult a doctor. Battery fluid is corrosive and may possibly cause loss of sight or chemical burns.
- Never charge when the product or battery is wet. Doing so may cause electric shock, fire, or malfunction due to short circuiting.
- When charging, follow the instructions that came with the batteries, this manual, or the instructions of the connected device. Use only the specified charger device and within the specified charging temperature range. Charging with an unspecified charger or at a temperature outside the range may cause leakage, overheating, rupture, explosion, or malfunction.
- When using rechargeable batteries, follow the instructions that came with the batteries. Use only the specified charger device and within the specified charging temperature range when charging. Charging with an unspecified charger or at a temperature outside the range may cause leakage, overheating, rupture, or malfunction.
- For battery installation and removal, be sure to read this manual or the instructions of the connected device and follow the instructions. Failure to comply may result in fire, overheating, rupture, explosion or malfunction.

- Keep batteries away from children. A child could accidentally swallow a battery. Failure to observe this may also cause inflammation due to battery fluid leakage.
- Do not subject batteries to mechanical shock. Doing so may cause damage caused by batteries, electric shock, or malfunction.
- Do not intentionally short the battery. Rupture or fluid leakage may cause fire or injury.
- Do not put batteries in a pocket or bag, or carry or store them together with pieces of metal. Batteries kept in such condition could short, rupture, or leak, causing fire or injury.
- When storing or discarding batteries, insulate the terminal area by applying tape, or some other protection. Mixing them with other batteries or metal objects can cause fire, burns, or inflammation due to fluid.

(For products using a coin/button cell battery)

• DO NOT INGEST BATTERY; CHEMICAL BURN HAZARD

The product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.



Connections

- Be sure to read the manual of the device to be connected, and follow the instructions. Failure to observe this may cause fire, overheating, rupture, or malfunction.

If you notice any abnormality

- If any of the following problems occur, immediately turn off the power switch and disconnect the power plug from the outlet. If you are using batteries, remove all batteries from the product. Finally have the device inspected by Yamaha service personnel.
 - The power cord or plug becomes frayed or damaged.
 - Unusual smells or smoke are emitted.
 - Some object, or water has been dropped into the product.
 - There is a sudden loss of sound during use of the product.
 - Cracks or other visible damage appear on the product.



CAUTION

Always follow the basic precautions listed below to avoid the possibility of physical injury to you or others, or damage to the product or other property. These precautions include, but are not limited to, the following:

Assembly

- Assemble the product in the proper sequence by following the attached documentation explaining the assembly process. Also, make sure to tighten the screws or bolts regularly. Failure to do so might result in damage to the product or even injury.

Location

- If the instrument has an air vent to dissipate heat, do not place objects in front of the vent. Doing so may prevent adequate ventilation of the internal components, and possibly result in the product overheating.
- Do not place the product in an unstable position or a location with excessive vibration, where it might accidentally fall over, resulting in malfunction and even injury.

- Do not go near the product during an earthquake. Strong shaking during an earthquake could cause the product to move or tip over, possibly causing injury.
- When transporting or moving a product weighting more than 20 kg, always use two or more people. Attempting to lift the product by only one or two individuals may result in injuries, such as back injuries, or cause the product to be dropped and broken, which could lead to other injuries.
- Before moving the product, remove all connected cables, to prevent damage to the cables or injury to anyone who might trip over them.
- Use only the stand or rack specified for the product. When attaching it, use the included screws and supplied accessory parts. Failure to do so could result in the product falling over, causing damage to the product or injury.

Connections

- Before connecting the product to other devices, turn off the power for all devices. Before turning the power on or off for all devices, set all volume levels to minimum.
- Be sure to set the volumes of all devices at their minimum levels and gradually raise the volume controls while playing the product to set the desired listening level.

Handling

- Do not insert your finger or hand in any gaps on the key cover or product. Also take care that the key cover does not pinch your finger.
- Do not insert foreign materials such as metal or paper into any openings or gaps of the product. Failure to observe this may cause fire, electric shock, or malfunctions.
- Do not rest your weight on, or place heavy objects on the product, and do not use excessive force on the buttons, switches or connectors.
- Keep small parts out of the reach of children, since they may accidentally swallow them.
- Do not use the product or headphones for a long period of time at a high or uncomfortable volume level, since this can cause permanent hearing loss. If you experience any hearing loss or ringing in the ears, consult a physician.
- Remove the power plug from the AC outlet before cleaning the unit. Failure to observe this may cause electric shock.

Yamaha cannot be held responsible for damage caused by improper use or modifications to the product, or data that is lost or destroyed.

Information for users on collection and disposal of old equipment and used batteries:



These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste. For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points, in accordance with your national legislation.



By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.

For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

For business users in the European Union:



If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

Information on Disposal in other Countries outside the European Union:



These symbols are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

Note for the battery symbol (bottom two symbol examples):

This symbol might be used in combination with a chemical symbol. In this case it complies with the requirement set by the EU Battery Directive for the chemical involved.

Cd

(58-M03 WEEE battery en 01)

EN

© 2016 Yamaha Corporation
Published 10/2025 MW-C0