

This manual describes the regular assembly of the DTXPRESS IV Standard Set V2. After assembling the parts and connecting the cords as shown in Figure 1, the unit is ready to be turned on.


* To assemble the unit, make sure you have the following three packages:

- RS70 (Rack System)
- DTP4K2STD (Pad Set)
- DTXP4 (Trigger Module)

⚠ Before assembling the unit, lay a drum mat (sold separately).

Before assembling the unit, lay a drum mat on the floor. Alternately, to prevent damaging your floor, lay the cardboard of the included packages, etc. on the floor before assembling the two parts shown in the circles in Figure 1.

Figure 1: Unit Regular Assembly

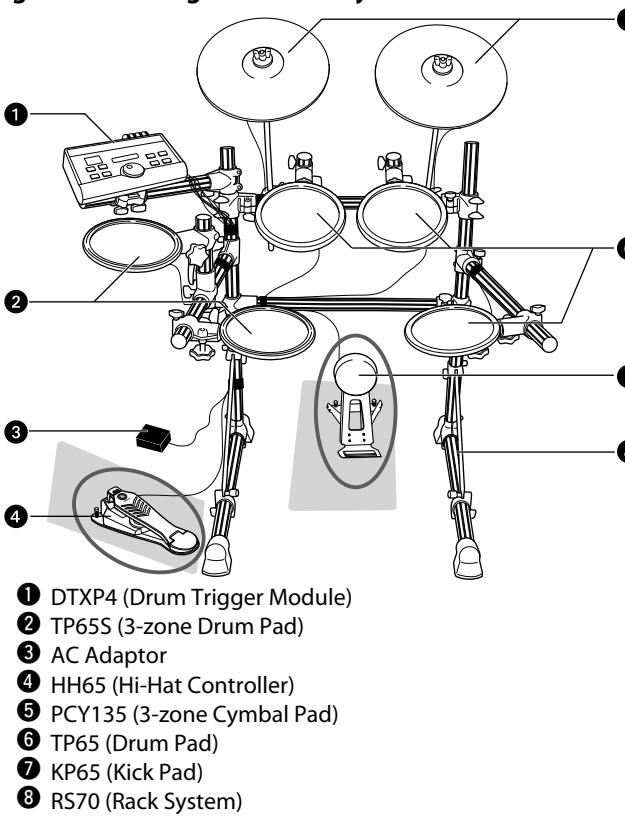


PRECAUTIONS

Before using, please read this assembly manual, and use this product in a safe and proper manner. Particularly in the case of children and young users, parents or an instructor should teach the children the proper manner in which to use the device.

⚠ WARNING If this symbol is ignored and the equipment is used improperly, fatal injury to persons or serious damage could occur.


- ! Do not let small children assemble or set up this product by themselves, or they may be injured. Always assemble this product with adult supervision.
- ! Be careful with the edges of the cymbal holders and the tom holders. The sharp holder ends may result in injury.
- ! Be careful with the edges of the spurs attached to the base. The sharp spur ends may result in injury.
- ! If this product is used with the rack system or a cymbal stand, make sure all bolts are tightened firmly. Also, when adjusting the height or angle, do not suddenly loosen the bolts. Loose bolts may result in the rack overturning or parts dropping, causing injury.
- ! Always set the product on a flat and solid surface. Placement on a sloping, unstable surface or on steps may result in the product being unstable and subject to overturning.
- ! When setting the product, please pay close attention to the handling and setting of cables. Carelessly placed cables may cause the user and others to trip and fall.
- ! Do not alter the product. Doing so may result in injury or damage/deterioration to the product.
- ! Do not sit or step on the rack. The rack may overturn or be damaged, resulting in injury.

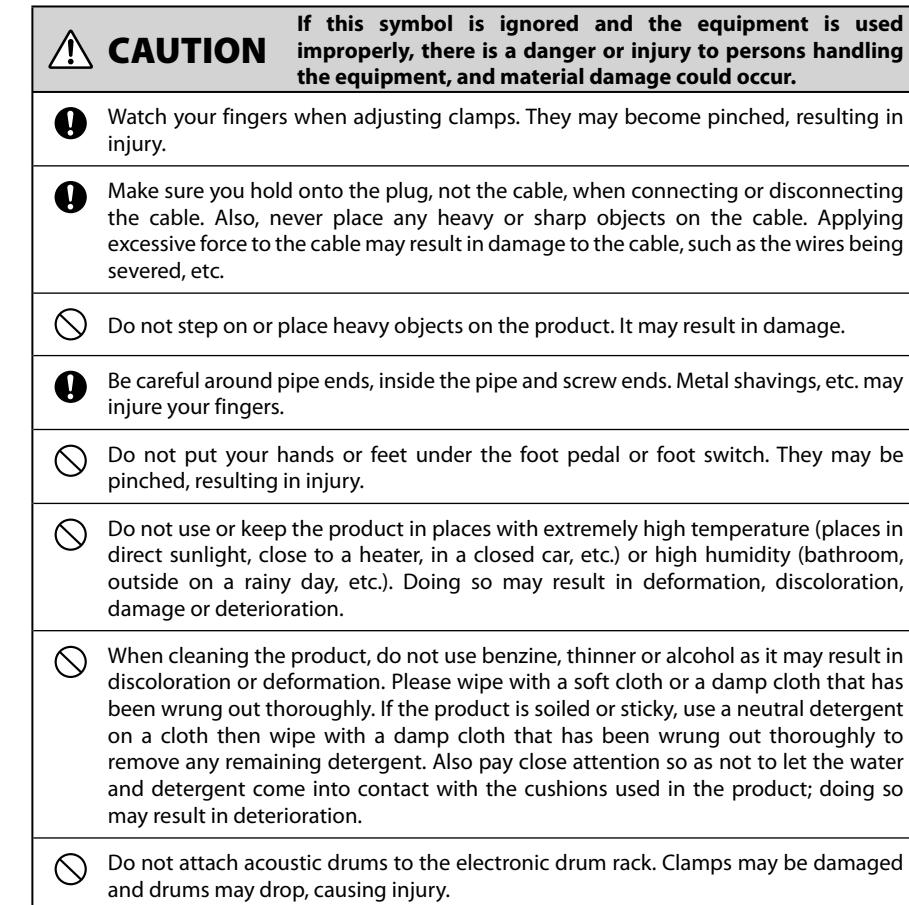

1 Checking the contents of RS70

Open the RS70 (Rack System) package and confirm the contents.

Figure 2: RS70 (Rack System)

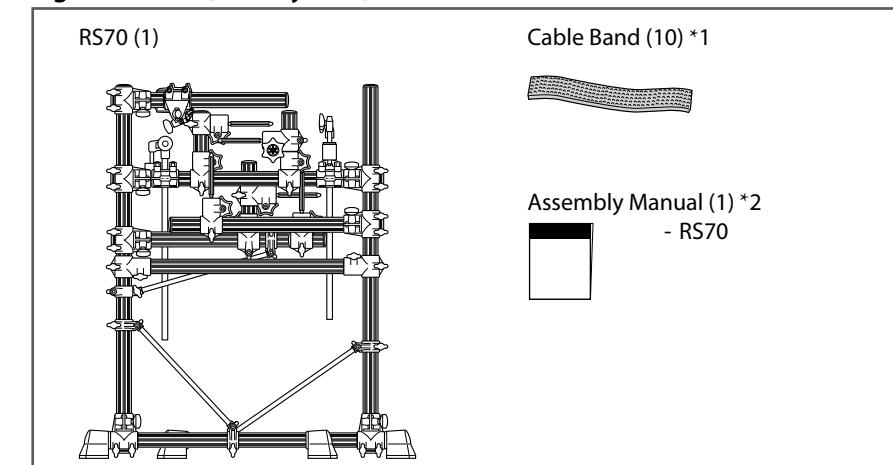


2 Assembling the Rack System

- 1 Take out the rack system from the package and remove all the cushioning. Remove the bubble wrap on the pipes while assembling the rack system.

⚠ The pipe ends may injure your fingers.


Figure 3: Rack Assembly-1

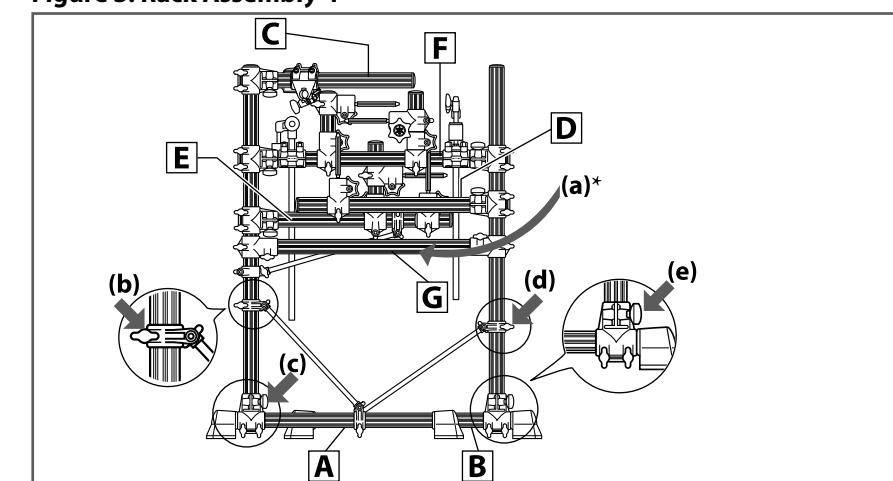

* YAMAHA logo printed on pipe [G] is facing the opposite side.

- 2 See Figure 3. Set up the rack system, with the YAMAHA logo label (a) on pipe [G] facing the opposite side from you. Support the rack system with your right hand, and loosen the two knobs (b) and (c) on your left.

Figure 4: Rack Assembly-2

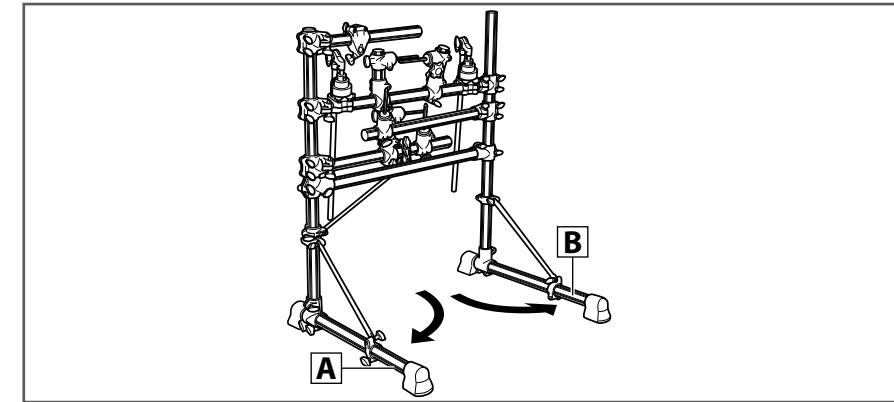


- 3 See Figure 4. Move the leg on your left (pipe [A]) in a clockwise direction until it is about 90 degrees from the pipe with the YAMAHA logo. Tighten the two knobs loosened in step 2 and fix the position of pipe [A].

- 4 See Figure 3 again. Loosen the two knobs (d) and (e) on your right.

- 5 See Figure 4 again. Move the leg on your right (pipe [B]) in a counterclockwise direction until it is parallel with pipe [A]. Tighten the two knobs loosened in step 4 and fix the position of pipe [B].

* In the following steps, loosen the knobs first, decide the position of the pipe, and then tighten the knobs. Be careful not to tighten the knobs excessively. For better performance, make minor adjustments for each part of the unit with the knobs after the assembly is completed.

Figure 5: Rack Assembly-3

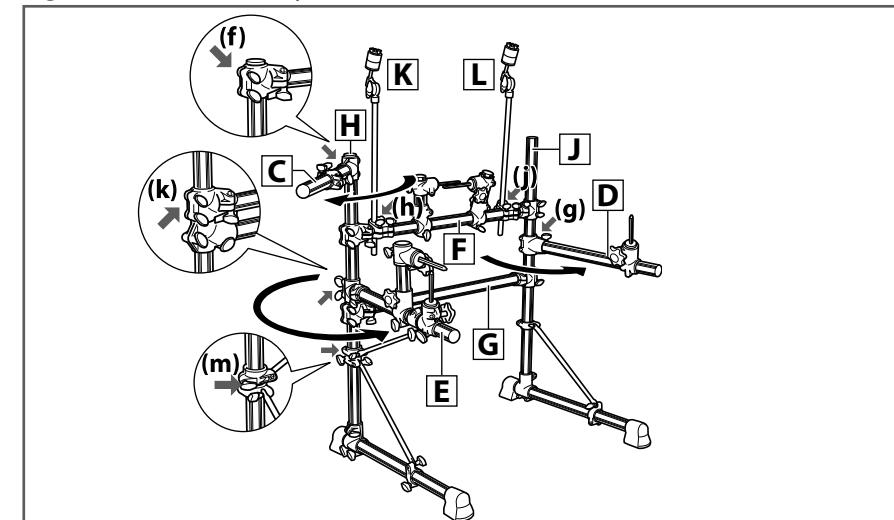

- 6 See Figure 5. Loosen the two knobs ((f) on the upper left) aligned at the base of pipe [C], and move pipe [C] slightly outward in a clockwise direction. Tighten the two knobs loosened and fix the position of pipe [C].

- 7 Loosen the two knobs (g) on the middle right aligned at the base of pipe [D]. Move pipe [D] in a counterclockwise direction until it is about 90 degrees from the pipe with the YAMAHA logo. Tighten the two knobs loosened and fix the position of pipe [D].


- 8 Loosen the knobs (h) and (j) (shown with (i) on the opposite side of pipe [F]) of the cymbal holders [K] and [L] on the right and left and pull up the cymbal holders vertically to the height illustrated. Tighten the knobs loosened and fix the positions of the cymbal holders.

- 9 Loosen the two knobs ((k) on the middle left) aligned at the base of pipe [E] and the knob (l) on the lower left) on the slim pipe supporting pipe [E]. Move pipe [E] all the way around the vertical pipe [H] in a counterclockwise direction until it is about 90 degrees from the pipe with the YAMAHA logo. Tighten the three knobs loosened and fix the position of pipe [E] and the slim pipe supporting it.

⚠ Be sure to move pipe [E] in a counterclockwise direction. If you move it in a clockwise direction, the slim pipes may collide and bend.

- 10 Check that the entire rack system is stable. Hold the upper area of the vertical pipe [H] and [J], and shake them. If the rack system is unstable, retighten the knobs tightened in steps 2 to 5.

Figure 6: Rack Assembly-4

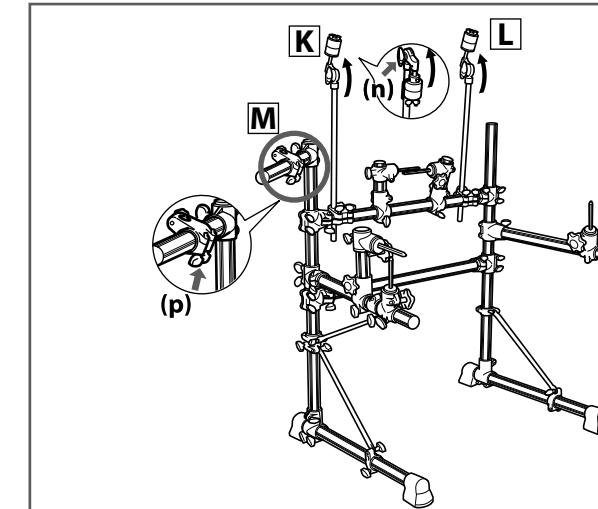

- 11 See Figure 6. Loosen the wing bolt (n) of the cymbal holder [K] and set up the upper part of the cymbal holder. Tighten the wing bolt loosened and fix the position of the cymbal holder [K]. Set up the upper part of the cymbal holders [L] in the same manner.

- 12 Loosen the two knobs (p) aligned along the pipe with the Trigger Module attachment part [M].

Adjust the Trigger Module attachment part [M] so the operating panel will face upward diagonally to your side when set. Hold the Trigger Module attachment part [M] firmly and turn it gradually. Tighten the two knobs loosened and fix the position of the Trigger Module attachment part [M].

3 Checking the contents of the Pad Set and the Trigger Module

Open the DTP4K2STD (Pad Set) and Trigger Module package and confirm the contents.


Figure 7: Pad Set DTP4K2STD



PCY135 (Cymbal Pad) (2)



HH65 (Hi-Hat Controller) (1)

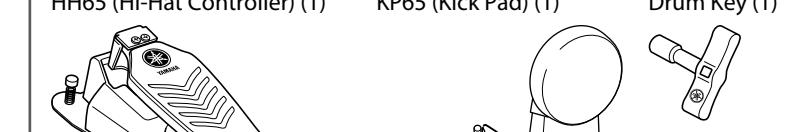

9-channel snake cable (1)


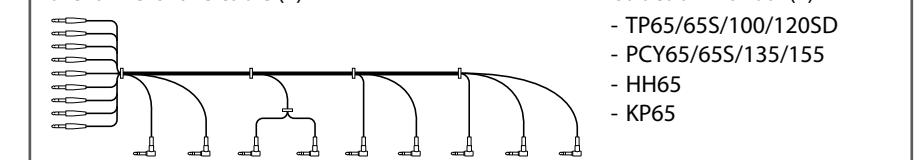


Figure 8: Trigger Module

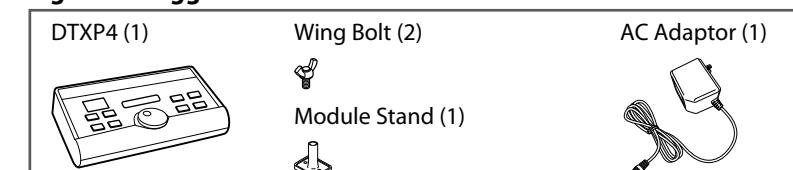


4

Mounting the pads and the trigger module on the rack system

Mount the pads and the trigger module on the rack system. Then position the kick pad and the hi-hat.


Mounting the TP65/65S (Drum pads) on the rack system

Figure 9: Pads Assembly-1

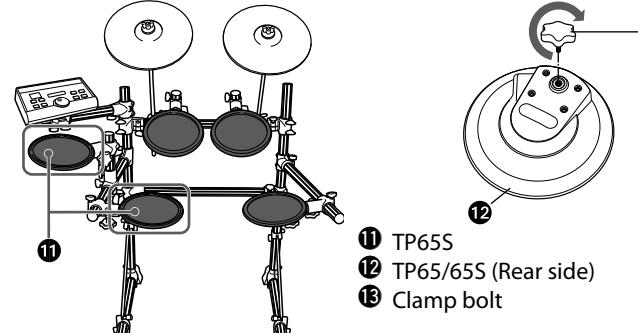


- See Figure 10. Attach the clamp bolts (13) on TP65/65S (12). Tighten the clamp bolts five to six turns each.

Figure 11: Pads Assembly-2

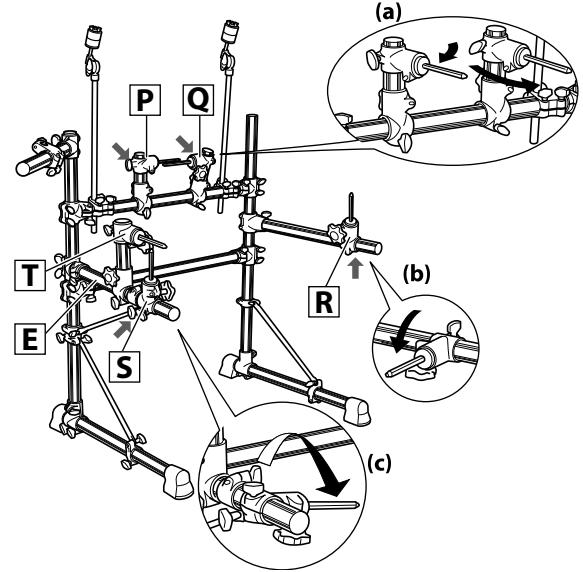

- See Figure 11. Loosen the knobs of the tom holders P and Q at the center of the rack system (shown with ↗). Move the tom holders as shown in Figure 11-(a). Then tighten the knobs and fix the position of the tom holders P and Q.
- Loosen the knob of the tom holder R on the right (shown with ↑). Move the tom holder inward as shown in Figure 11-(b). Tighten the knobs and attach the tom holder firmly at a position where it points slightly downward.


Figure 12: Tom Holder and Drum Pad



- Attach the TP65 (Drum pad) to the tom holder P as shown in Figure 12. Tighten the clamp bolt and fix the position.
- See Figure 11 again. Repeat step 3 and 4 in the same manner for tom holder Q at the center of the rack system and for tom holder R on the right, and attach the TP65 (Drum pad) to each tom holder.
- Loosen the knobs of the tom holder S on the left (shown with ↙). Move the tom holder inward as shown in Figure 11-(c) until it is pointing slightly downward than pipe E.
- Attach the 3-zone drum pad TP65S to the tom holder S set down in step 6. Tighten the clamp bolt and attach the TP65S firmly. Attach the TP65S to the tom holder T (right near the tom holder S) in the same manner. Move the tom holder T until it is pointing slightly outward than pipe E.


Mounting the PCY135 (Cymbal pads) on the rack system

Figure 13: Pads Assembly-3

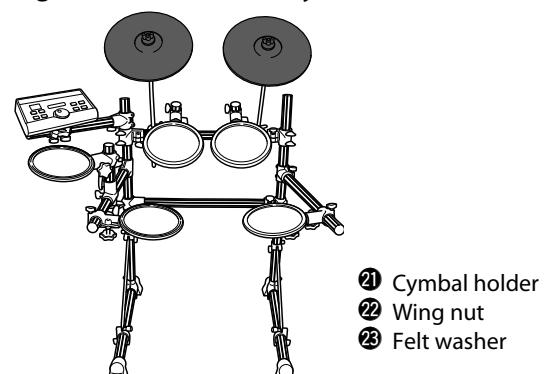


- See Figure 14. Remove the wing nut (22) and the two felt washers (23) from the cymbal holder (21). Then turn the black plastic part in a counterclockwise direction and remove it.

Figure 14: Cymbal holder-1

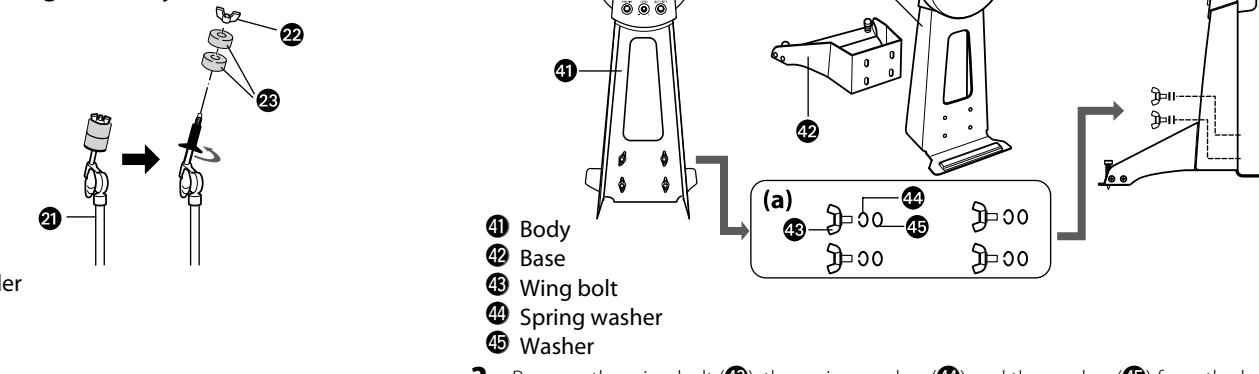

- Remove the wing bolt (43), the spring washer (44) and the washer (45) from the body (41), and keep the four sets nearby in the order removed.
* If the wing bolt, the spring washer and/or the washer are separated from each other, set them as illustrated in Figure 21-(a).
- Set the base (42) on the body (41), and attach them using the wing bolt, the spring washer and the washer removed in step 1.

Figure 15: Cymbal holder-2

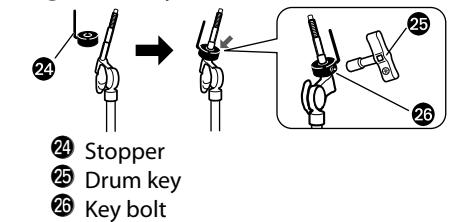

- See Figure 15. Attach the stopper to the cymbal holder, and fix at a position where the L-shaped part of the stopper is on the opposite side from you. To fix the position of the stopper (24), use the drum key (25) and tighten the key bolt (26) firmly.
- See Figure 16. Attach the black plastic part removed in step 1 to the cymbal holder, and tighten it in a clockwise direction.
- Attach one of the felt washers removed in step 1 to the cymbal holder. The other felt washer will not be used within the regular assembly described in this manual.

Figure 16: Cymbal holder-3


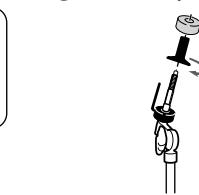


Figure 17: Cymbal holder and Cymbal pad

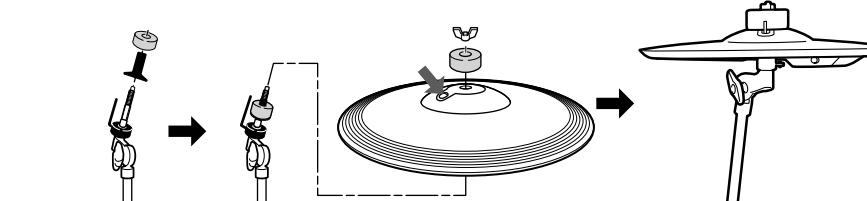


- See Figure 17. Insert the end of the L-shaped part of the stopper into the oval-shaped hole on the cymbal pad (shown with ↗) to set the cymbal pad on the cymbal holder.
- Attach the included round-shaped felt with a large hole-diameter to the cymbal holder, then attach the wing nut removed in step 1 and tighten it. Turn the wing nut until you are certain that the cymbal pad is attached. The cymbal pad is designed to shake when you hit the surface, even when the wing nut is tightened securely.

Mounting the DTXP4 (Trigger module)


Figure 18: Pads Assembly-4

Figure 19: Module stand

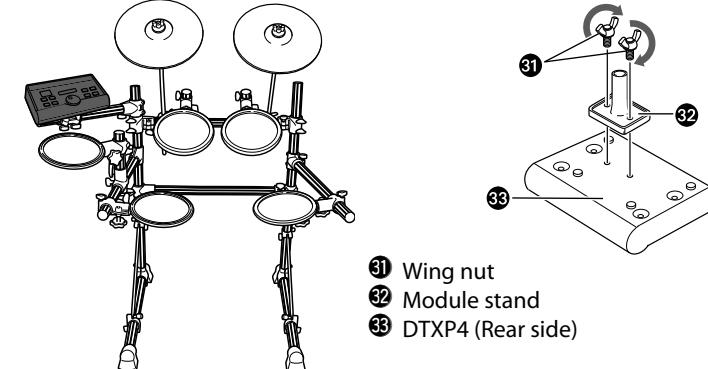

- Attach the module stand (32) onto the rear side of the DTXP4 (33) using the wing nuts (31).

Figure 20: Module stand and clamp

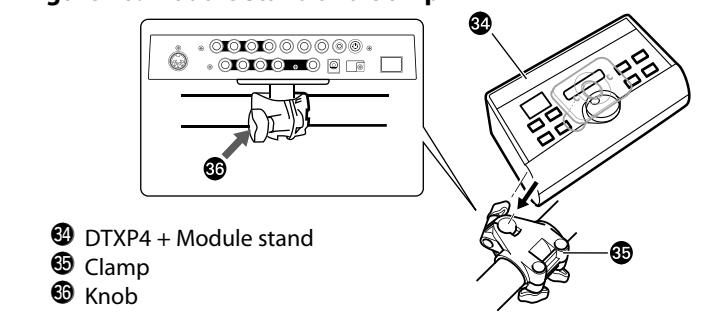


- Attach the module stand (34) onto the clamp (35). Tighten the knob (36) and fix the position.

Assembling the KP65 (Kick pad)

- If a drum mat (sold separately) is not available, lay a cardboard on the floor to prevent scratching the surface.


Figure 21: KP65 Assembly

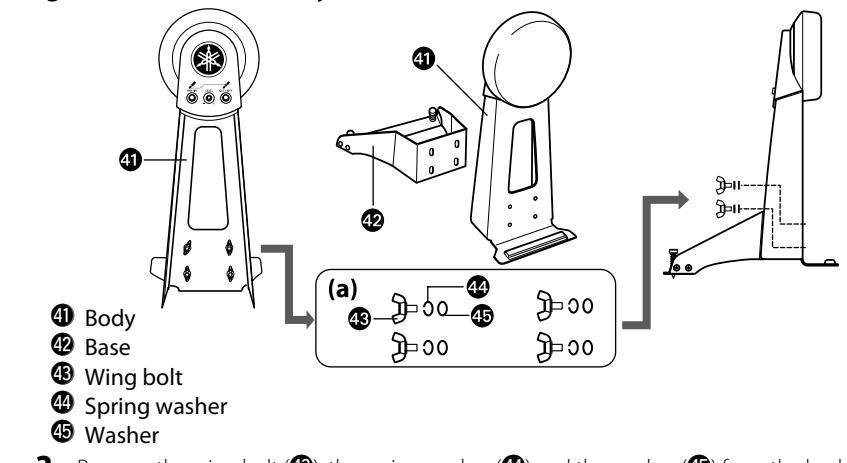

- Remove the wing bolt (43), the spring washer (44) and the washer (45) from the body (41), and keep the four sets nearby in the order removed.
* If the wing bolt, the spring washer and/or the washer are separated from each other, set them as illustrated in Figure 21-(a).
- Set the base (42) on the body (41), and attach them using the wing bolt, the spring washer and the washer removed in step 1.

Installing the HH65 (Hi-Hat controller) and KP65 (Kick pad)

Figure 22: HH65 and KP65

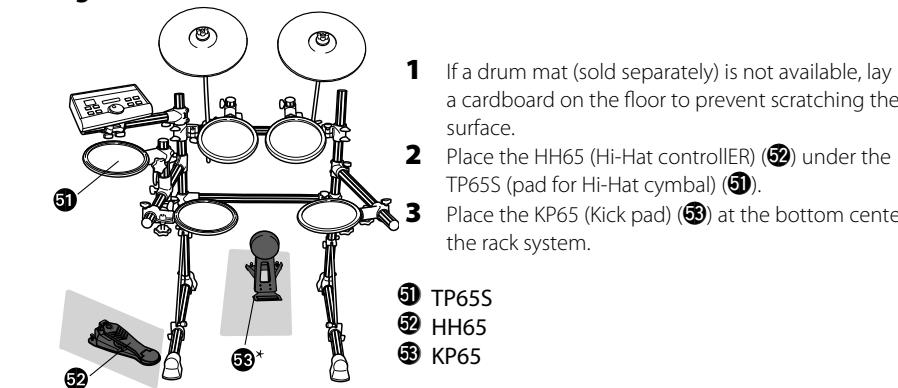

* A foot pedal (sold separately) is necessary to use the kick pad.

5 Connecting the pads to the Trigger Module

Connect the output jacks of the pad and the input jacks of the trigger module with the 9-channel snake cable.

Figure 23: DTXP4 (Rear panel)


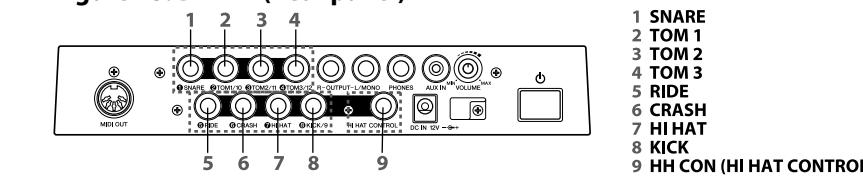



Figure 24: 9-channel Snake Cable

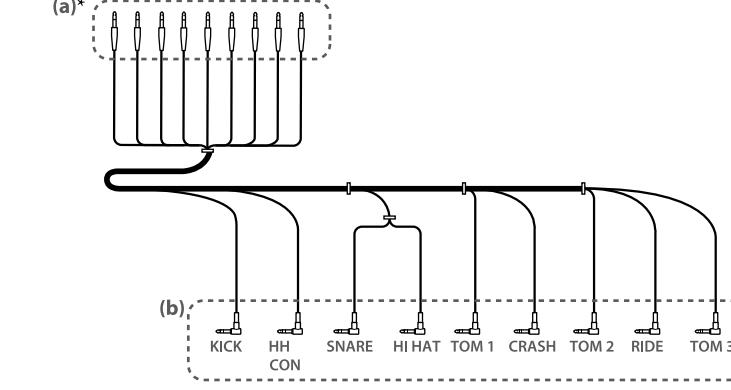

* Each straight plug is labeled indicating the input jacks to which they are to be connected.

- Insert the straight plugs (Figure 24-(a)) of the 9-channel snake cable into the input jacks on the rear panel of the trigger module. For regular assembly, connect the straight plugs to the input jacks in accordance with the indication on each label.

Figure 25: Diagram of standard connection

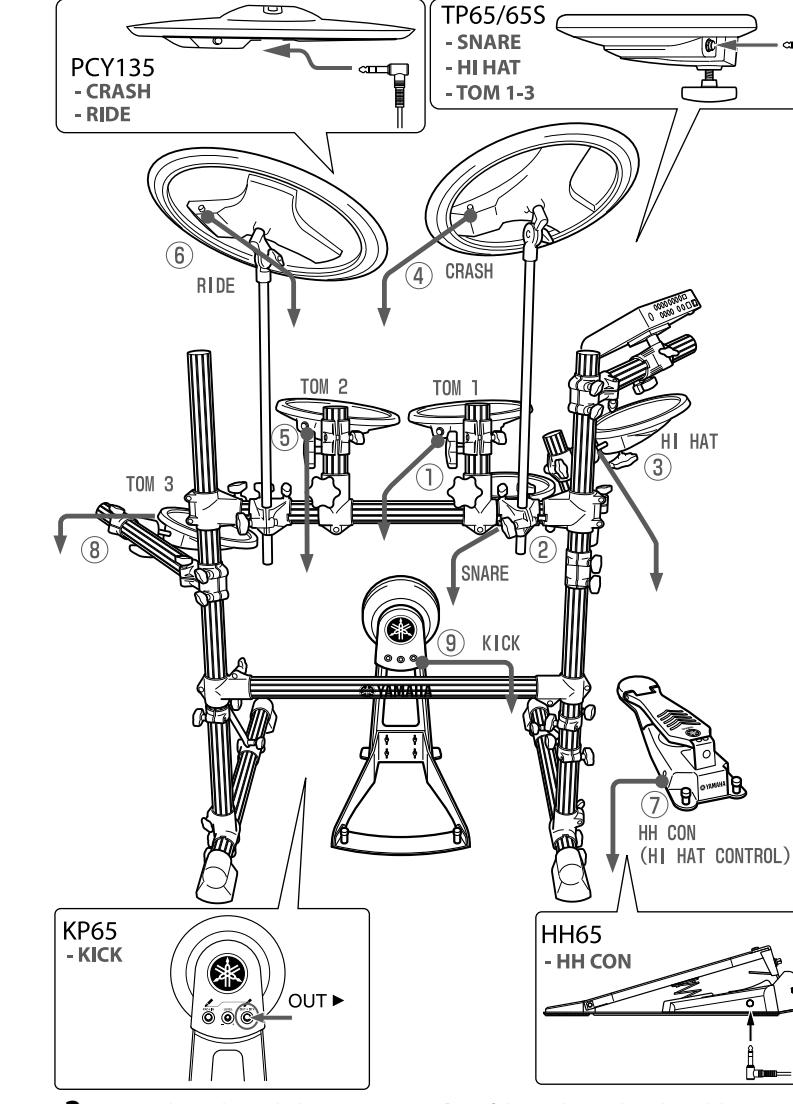

- Insert the L-shaped plugs (Figure 24-(b)) of the 9-channel snake cable into each corresponding pad. It is recommended to connect the cables in order from numbers ① to ⑨ shown in Figure 25 (from the shortest cable to the longest cable).

6

Connecting to a power source


Connect the AC adaptor to the DTXP4.

Figure 26: Power switch (DTXP4 rear panel)




- Make sure to turn the power off (the Standby/On switch (63) is set to the standby position (■)).

Figure 27: Cable clip (DTXP4 rear panel)

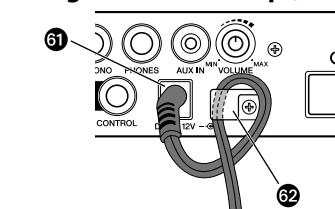

- Attach the AC adaptor to connect to a power source.
- Insert the DC plug into the power supply jack (61) and twist the cable around the cable clip (62) to prevent the DC plug from falling out.

Figure 28: Using Cable Band

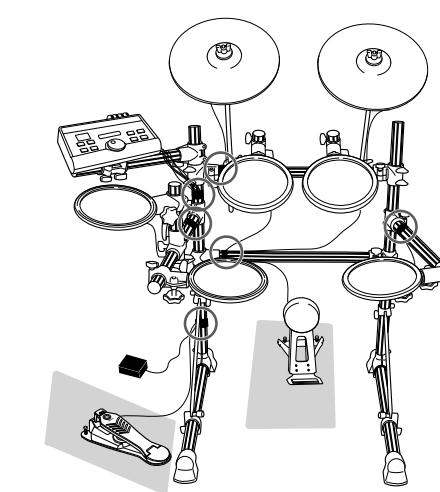

- Use the cable bands to bind the cables to the pipes at the six points marked with circles.
- * Leaving the cable slackened may interfere with your performance.

The assembly is now completed.

* To check the actual sound, connect the unit with an amplified speaker or a headphone before turning on the power.